

Revision A:

- MUZ-FE18NA has been added.

Please void OBH543.

OUTDOOR UNIT SERVICE MANUAL




No. OBH543
REVISED EDITION-A

Models

MUZ-FE09NA
MUZ-FE12NA
MUZ-FE18NA

Indoor unit service manual
MSZ-FE•NA Series (OBH542)

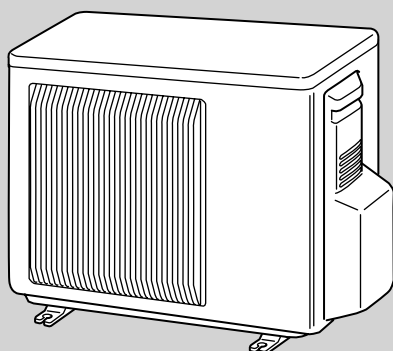

MUZ-FE09NA
MUZ-FE12NA

CONTENTS

| | |
|-------------------------------------|----|
| 1. TECHNICAL CHANGES | 2 |
| 2. PART NAMES AND FUNCTIONS | 2 |
| 3. SPECIFICATION | 3 |
| 4. OUTLINES AND DIMENSIONS | 5 |
| 5. WIRING DIAGRAM | 6 |
| 6. REFRIGERANT SYSTEM DIAGRAM | 7 |
| 7. DATA | 9 |
| 8. ACTUATOR CONTROL | 16 |
| 9. SERVICE FUNCTIONS | 17 |
| 10. TROUBLESHOOTING | 17 |
| 11. DISASSEMBLY INSTRUCTIONS | 36 |

PARTS CATALOG (OBB543)

NOTE:

RoHS compliant products have <G> mark on the spec name plate.

Mr. SLIM™

Revision A:

- MUZ-FE18NA has been added.

1

TECHNICAL CHANGES

MUZ-FE09NA

MUZ-FE12NA


MUZ-FE18NA

1. New model


2

PART NAMES AND FUNCTIONS

MUZ-FE09NA MUZ-FE12NA

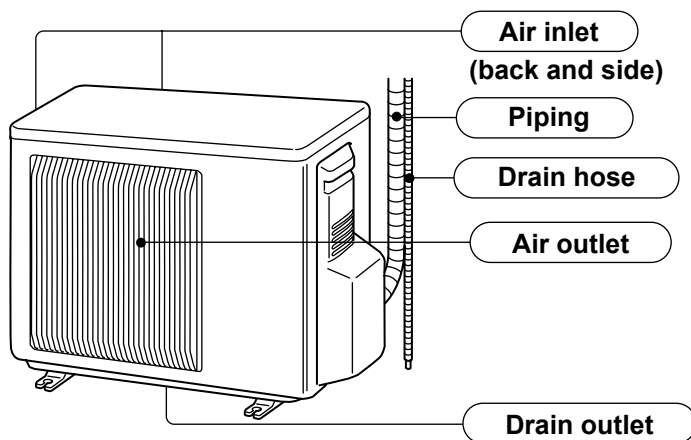

MUZ-FE18NA

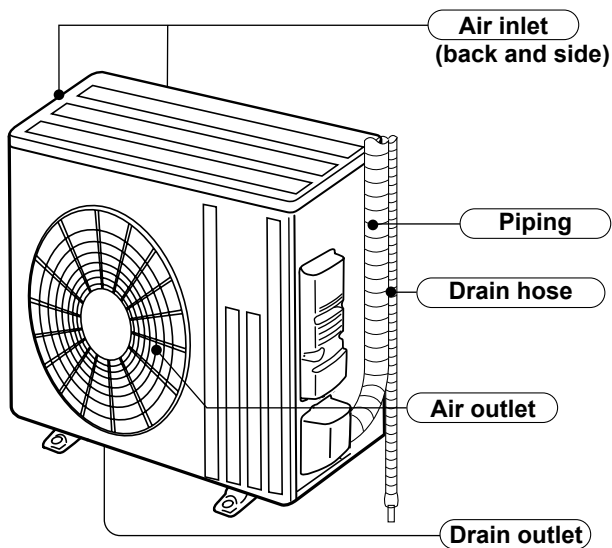

| Outdoor unit model | | | MUZ-FE09NA | MUZ-FE12NA | MUZ-FE18NA |
|--|-----------------------------|-------|------------------------|-----------------------|-----------------------|
| Capacity Rated (Minimum~Maximum) | Cooling ※1 | Btu/h | 9,000 (2,800~9,000) | 12,000 (2,800~12,000) | 18,000 (8,200~25,200) |
| | Heating 47 ※1 | Btu/h | 10,900 (3,000~18,000) | 13,600 (3,000~21,000) | 21,600 (7,500~29,700) |
| Capacity Rated | Heating 17 ※2 | Btu/h | 12,500 | 13,600 | 19,300 |
| Power consumption Rated (Minimum~Maximum) | Cooling ※1 | W | 580 (160~650) | 930 (160~960) | 1,270 (570~2,280) |
| | Heating 47 ※1 | W | 710 (150~2,250) | 950 (150~2,250) | 1,540 (520~2,420) |
| Power consumption Rated | Heating 17 ※2 | W | 1,730 | 1,780 | 2,180 |
| EER ※1 [SEER] ※3 | Cooling | | 15.5 [26.0] | 12.9 [23.0] | 14.2 [20.2] |
| HSPF IV ※4 | Heating | | 10.0 | 10.6 | 10.3 |
| COP | Heating ※1 | | 4.50 | 4.20 | 4.11 |
| Power supply | V , phase , Hz | | 208/230, 1 , 60 | | |
| Max. fuse size (time delay) | | A | 15 | | 20 |
| Min. circuit ampacity | | A | 12 | | 17.1 |
| Fan motor | | F.L.A | 0.56 | | 0.93 |
| Compressor | Model | | SNB130FQAH | | SNB172FQKMT |
| | | R.L.A | 8.6 | | 12.9 |
| | | L.R.A | 10.8 | | 16.1 |
| | Refrigeration oil L (Model) | | 0.45 (NEO22) | | 0.40 (FV50S) |
| Refrigerant control | | | Linear expansion valve | | |
| Sound level ※1 | Cooling | dB(A) | 48 | 48 | 55 |
| | Heating | dB(A) | 49 | 49 | 55 |
| Defrost method | | | Reverse cycle | | |
| Dimensions | W | in. | 31-1/2 | | 33-1/16 |
| | D | in. | 11-1/4 | | 13 |
| | H | in. | 21-5/8 | | 34-5/8 |
| Weight | | lb. | 80 | | 119 |
| External finish | | | Munsell 3Y 7.8/1.1 | | |
| Remote controller | | | Wireless type | | |
| Control voltage (by built-in transformer) | | VDC | 12 - 24 | | |
| Refrigerant piping | | | Not supplied | | |
| Refrigerant pipe size (Min. wall thickness) | Liquid | in. | 1/4 (0.0315) | | 3/8 (0.0315) |
| | Gas | in. | 3/8 (0.0315) | | 5/8 (0.0315) |
| Connection method | Indoor | | Flared | | Flared |
| | Outdoor | | Flared | | Flared |
| Between the indoor & outdoor units | Height difference | ft. | 40 | | 50 |
| | Piping length | ft. | 65 | | 100 |
| Refrigerant charge (R410A) | | | 2 lb. 9 oz. | | 4 lb. 3 oz. |

NOTE: Test conditions are based on AHRI 210/240.

※1: Rating conditions (Cooling) — Indoor: 80°FDB, 67°FWB, Outdoor: 95°FDB, (75°FWB) Rated frequency
 (Heating) — Indoor: 70°FDB, 60°FWB, Outdoor: 47°FDB, 43°FWB Rated frequency
 ※2: (Heating) — Indoor: 70°FDB, 60°FWB, Outdoor: 17°FDB, 15°FWB Maximum frequency

Test condition

*3,*4

| ARI | Mode | Test | Indoor air condition (°F) | | Outdoor air condition (°F) | |
|-----|-------------------|--|---------------------------|----------|----------------------------|----------|
| | | | Dry bulb | Wet bulb | Dry bulb | Wet bulb |
| | SEER (Cooling) | "A-2" Cooling Steady State at rated compressor Speed | 80 | 67 | 95 | (75) |
| | | "B-2" Cooling Steady State at rated compressor Speed | 80 | 67 | 82 | (65) |
| | | "B-1" Cooling Steady State at minimum compressor Speed | 80 | 67 | 82 | (65) |
| | | "F-1" Cooling Steady State at minimum compressor Speed | 80 | 67 | 67 | (53.5) |
| | | "E-V" Cooling Steady State at Intermediate compressor Speed *5 | 80 | 67 | 87 | (69) |
| | HSPF (Heating) | "H1-2" Heating Steady State at rated compressor Speed | 70 | 60 | 47 | 43 |
| | | "H3-2" Heating at rated compressor Speed | 70 | 60 | 17 | 15 |
| | | "H0-1" Heating Steady State at minimum compressor Speed | 70 | 60 | 62 | 56.5 |
| | | "H1-1" Heating Steady State at minimum compressor Speed | 70 | 60 | 47 | 43 |
| | | "H2-V" Heating at Intermediate compressor Speed *5 | 70 | 60 | 35 | 33 |

*5: At Intermediate compressor Speed

= ("Cooling rated compressor speed" - "minimum compressor speed") / 3 + "minimum compressor speed".

OPERATING RANGE

(1) POWER SUPPLY


| | Rated voltage | Guaranteed voltage (V) |
|--------------|-------------------------------|--|
| Outdoor unit | 208/230 V 1 phase 60 Hz | <div> Min. 187 208 230 Max. 253 </div> |

(2) OPERATION


| Mode | Condition | Intake air temperature (°F) | | | |
|---------|----------------------|-----------------------------|----|---------|-----|
| | | Indoor | | Outdoor | |
| | | DB | WB | DB | WB |
| Cooling | Standard temperature | 80 | 67 | 95 | — |
| | Maximum temperature | 90 | 73 | 115 | — |
| | Minimum temperature | 67 | 57 | 14 | — |
| | Maximum humidity | 78 % | | — | |
| Heating | Standard temperature | 70 | 60 | 47 | 43 |
| | Maximum temperature | 80 | 67 | 75 | 65 |
| | Minimum temperature | 70 | 60 | -13 | -15 |

MUZ-FE09NA MUZ-FE12NA


Unit: inch

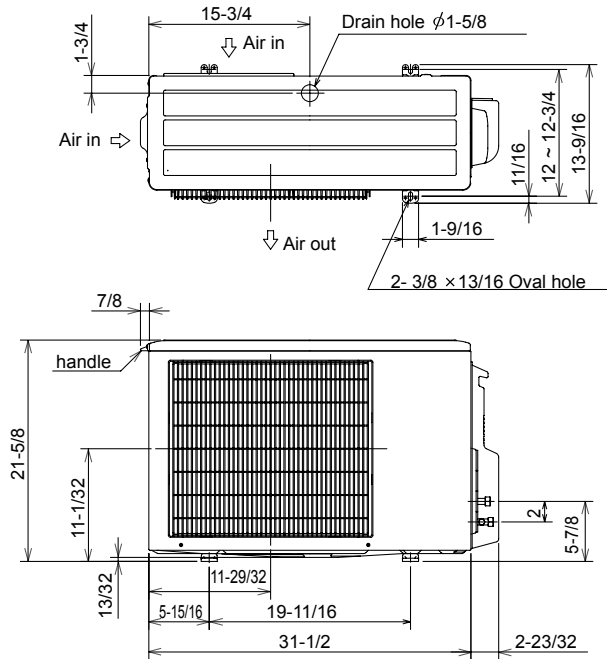




REQUIRED SPACE

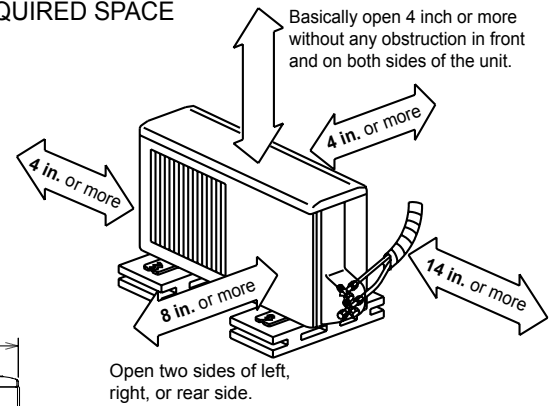


MUZ-FE18NA

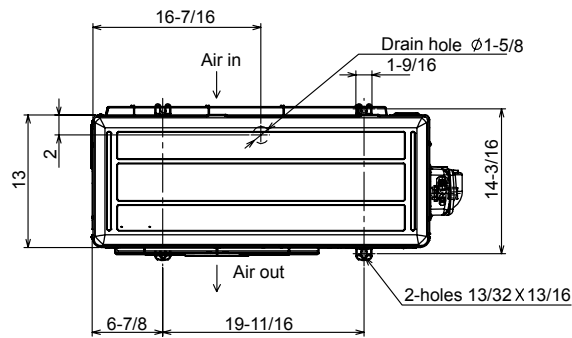

REQUIRED SPACE

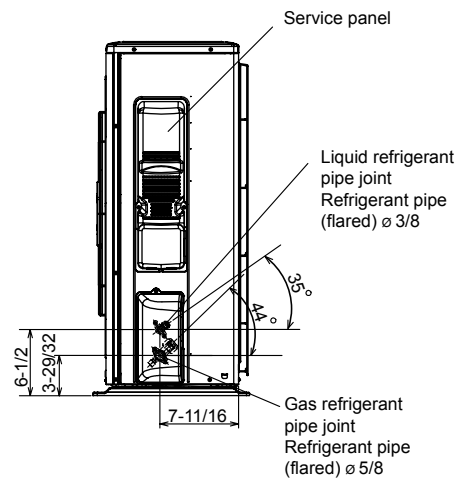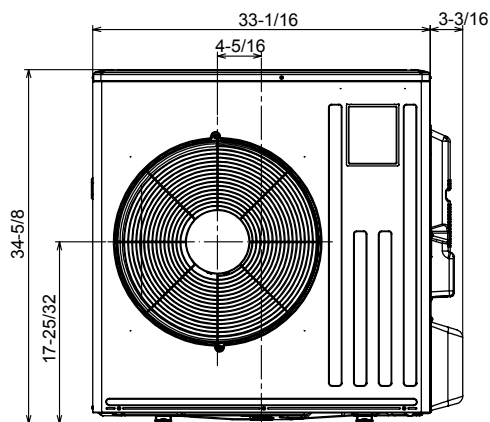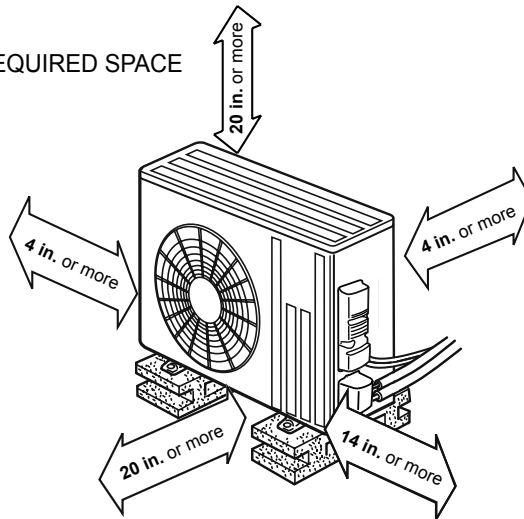


MUZ-FE09NA MUZ-FE12NA

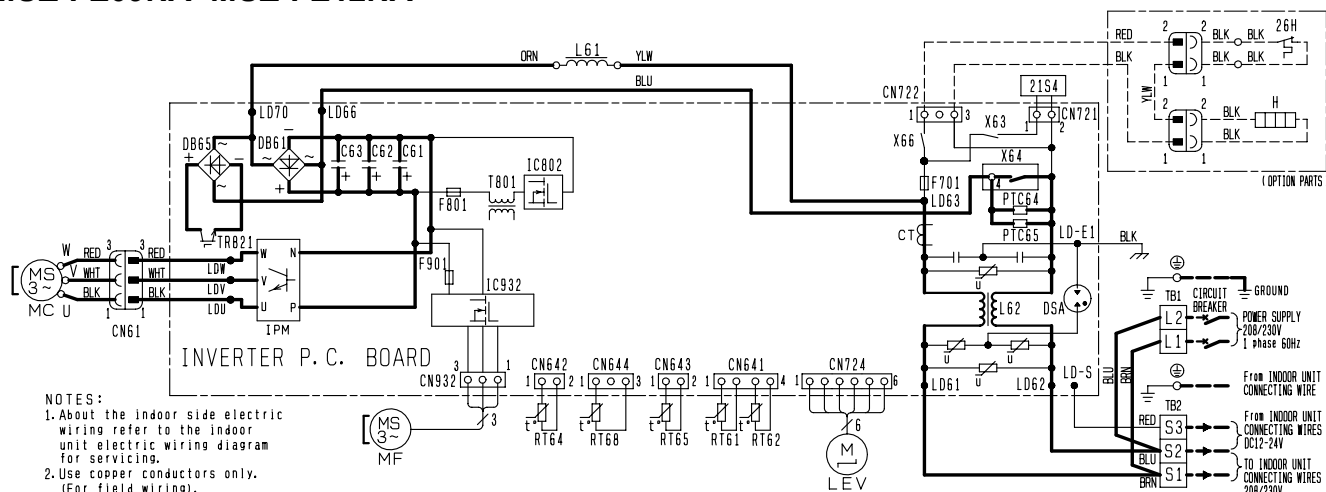

| SYMBOL | NAME | SYMBOL | NAME | SYMBOL | NAME |
|------------------|------------------------------|--------------|----------------------------|---------------|---|
| CT | CURRENT TRANSFORMER | L62 | CMC COIL | RT68 | OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR |
| C61, C62, C63 | SMOOTHING CAPACITOR | LEV | EXPANSION VALVE COIL | TB1, TB2 | TERMINAL BLOCK |
| DB61, DB65 | DIODE MODULE | MC | COMPRESSOR | TB821 | SWITCHING POWER TRANSISTOR |
| DSA | SURGE ABSORBER | MF | FAN MOTOR | T801 | TRANSFORMER |
| F701, F801, F901 | FUSE (T3.15A/250V) | PTC64, PTC65 | CIRCUIT PROTECTION | X63, X64, X66 | RELAY |
| H | DEFROST HEATER(OPTION PARTS) | RT61 | DEFROST THERMISTOR | 21S4 | REVERSING VALVE COIL |
| IC802 | INTELLIGENT POWER DEVICE | RT62 | DISCHARGE TEMP. THERMISTOR | 26H | HEATER PROTECTOR(OPTION PARTS) |
| IPM, IC932 | INTELLIGENT POWER MODULE | RT64 | FIN TEMP. THERMISTOR | | |
| L61 | REACTOR | RT65 | AMBIENT TEMP. THERMISTOR | | |


MUZ-FE18NA

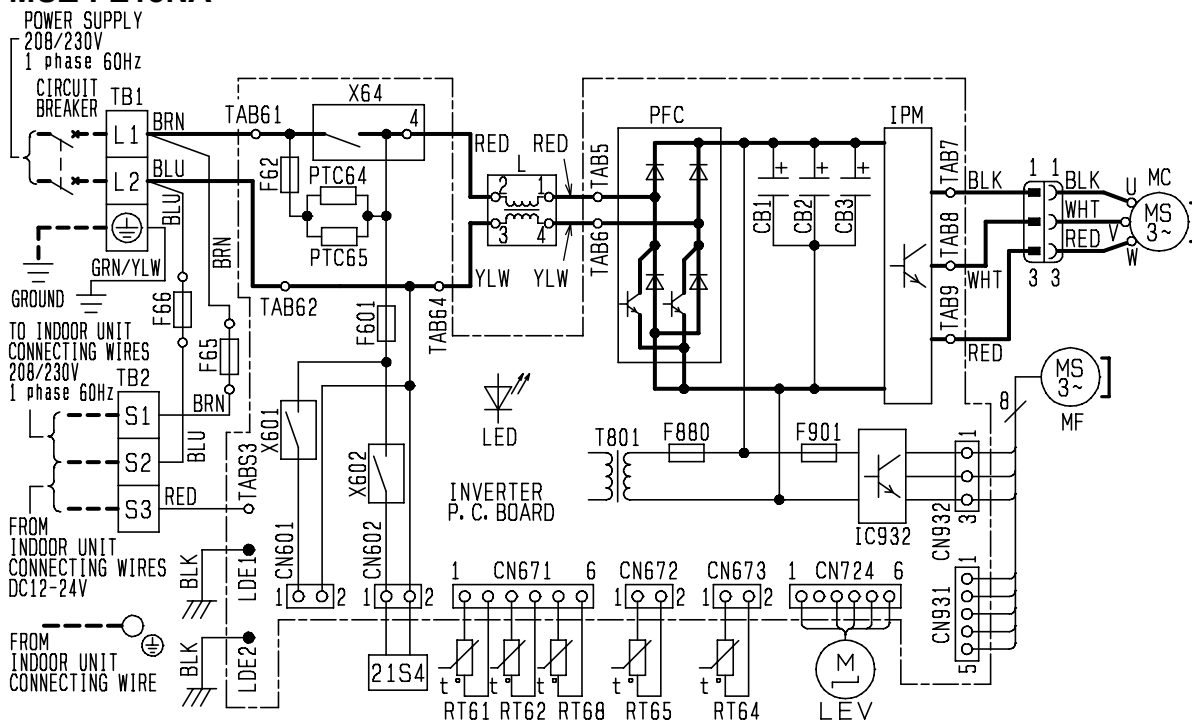


| SYMBOL | NAME | SYMBOL | NAME |
|----------|--------------------------|------------|---|
| CB1~3 | SMOOTHING CAPACITOR | PTC64 | CIRCUIT PROTECTION |
| F601 | FUSE (T3.15A/250V) | PTC65 | CIRCUIT PROTECTION |
| F62 | FUSE (T2A/250V) | RT61 | DEFROST THERMISTOR |
| F65, F66 | FUSE (T6.3A/250V) | RT62 | DISCHARGE TEMP. THERMISTOR |
| F880 | FUSE (T3.15A/250V) | RT64 | FIN TEMP. THERMISTOR |
| F901 | FUSE (T3.15A/250V) | RT65 | AMBIENT TEMP. THERMISTOR |
| IC932 | INTELLIGENT POWER MODULE | RT68 | OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR |
| IPM | INTELLIGENT POWER MODULE | TB1, TB2 | TERMINAL BLOCK |
| L | REACTOR | T801 | TRANSFORMER |
| LEV | EXPANSION VALVE COIL | X601, X602 | RELAY |
| MC | COMPRESSOR | X64 | RELAY |
| MF | FAN MOTOR | 21S4 | REVERSING VALVE SOLENOID COIL |
| PFC | POWER FACTOR CONTROLLER | | |

MUZ-FE09NA MUZ-FE12NA

Unit: inch

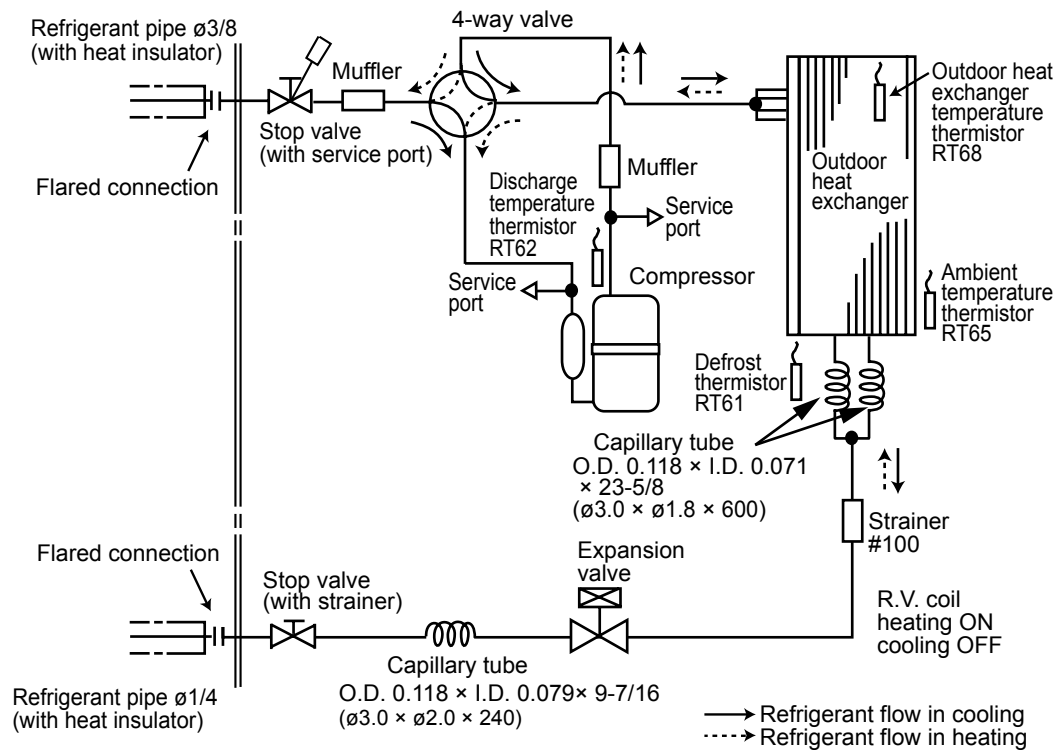


MUZ-FE18NA

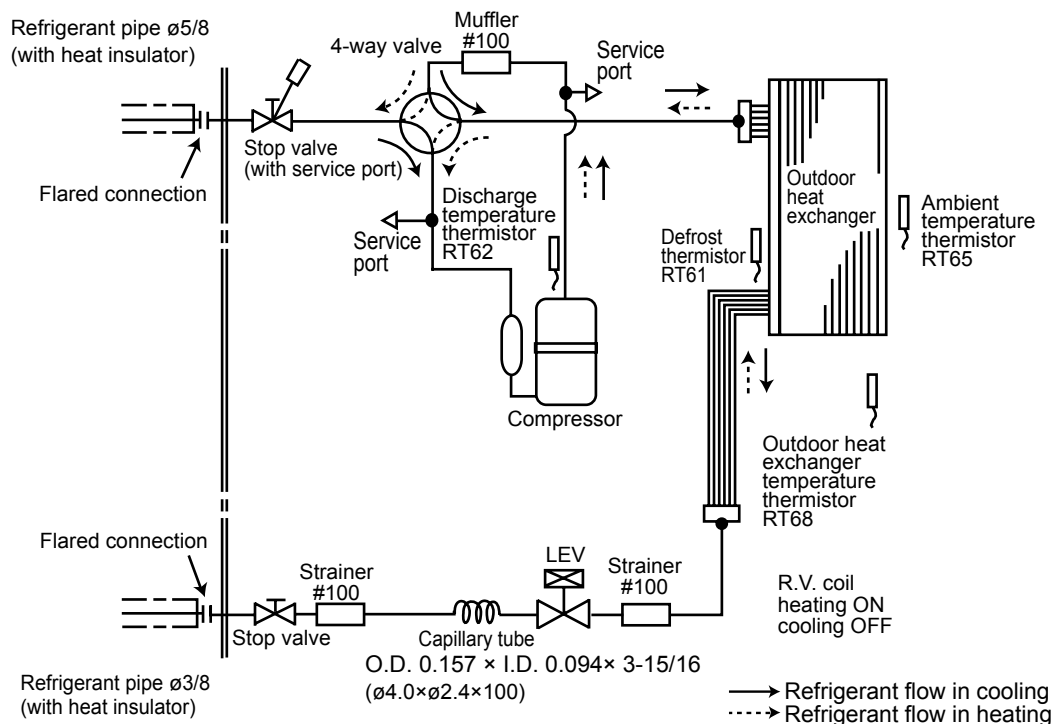

MAX. REFRIGERANT PIPING LENGTH and MAX. HEIGHT DIFFERENCE

| Model | Refrigerant piping: ft. | | Piping size O.D: in. | |
|--|-------------------------|-----------------------------|----------------------|--------|
| | Max. Length A | Max. Height difference B | Gas | Liquid |
| MUZ-FE09NA MUZ-FE12NA | 65 | 40 | 3/8 | 1/4 |
| MUZ-FE18NA | 100 | 50 | 5/8 | 3/8 |

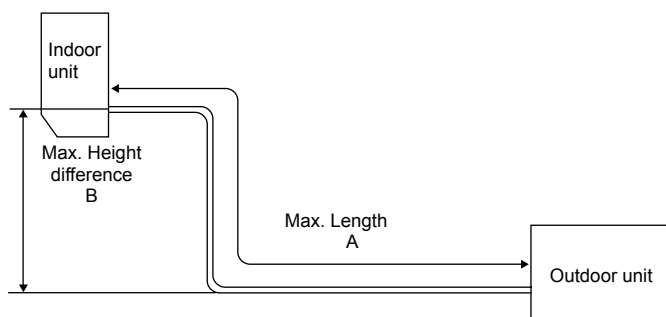

ADDITIONAL REFRIGERANT CHARGE (R410A: oz.)

NOTE: Refrigerant piping exceeding 25 ft. requires additional refrigerant charge according to the calculation.

| Model | Outdoor unit precharged | Refrigerant piping length (one way): ft. | | | | | |
|--|-------------------------|--|------|------|------|-------|-------|
| | | 25 | 30 | 40 | 50 | 60 | 65 |
| MUZ-FE09NA MUZ-FE12NA | 2 lb. 9 oz. | 0 | 1.62 | 4.86 | 8.10 | 11.34 | 12.96 |

Calculation: X oz. = 1.08/5 oz. / ft. × (Refrigerant piping length (ft.) - 25)

NOTE: Refrigerant piping exceeding 33 ft. requires additional refrigerant charge according to the calculation.

| Model | Outdoor unit precharged | Refrigerant piping length (one way): ft. | | | | | | | |
|-------------------|-------------------------|--|------|-------|-------|-------|-------|-------|-------|
| | | 33 | 40 | 50 | 60 | 70 | 80 | 90 | 100 |
| MUZ-FE18NA | 4 lb. 3 oz. | 0 | 4.14 | 10.06 | 15.98 | 21.90 | 27.82 | 33.74 | 39.66 |

Calculation: X oz. = 2.96/5 oz. / ft. × (Refrigerant piping length (ft.) - 33)

MUZ-FE09NA MUZ-FE12NA MUZ-FE18NA

7-1. PERFORMANCE DATA

1) COOLING CAPACITY

| Model | Indoor air IWB (°F) | Outdoor intake air DB temperature (°F) | | | | | | | | | | | | | | |
|------------|------------------------|--|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| | | 75 | | | 85 | | | 95 | | | 105 | | | 115 | | |
| | | TC | SHC | TPC | TC | SHC | TPC | TC | SHC | TPC | TC | SHC | TPC | TC | SHC | TPC |
| MUZ-FE09NA | 71 | 11.0 | 6.9 | 0.58 | 10.3 | 6.5 | 0.63 | 9.7 | 6.1 | 0.68 | 9.0 | 5.6 | 0.72 | 8.3 | 5.2 | 0.75 |
| | 67 | 10.4 | 7.9 | 0.55 | 9.7 | 7.4 | 0.60 | 9.0 | 6.8 | 0.65 | 8.4 | 6.4 | 0.69 | 7.7 | 5.8 | 0.72 |
| | 63 | 9.8 | 8.8 | 0.52 | 9.1 | 8.1 | 0.58 | 8.5 | 7.6 | 0.62 | 7.7 | 6.9 | 0.66 | 7.0 | 6.3 | 0.69 |
| MUZ-FE12NA | 71 | 14.7 | 8.8 | 0.85 | 13.7 | 8.2 | 0.94 | 12.9 | 7.7 | 1.01 | 12.0 | 7.2 | 1.06 | 11.0 | 6.6 | 1.10 |
| | 67 | 13.9 | 10.2 | 0.81 | 13.0 | 9.5 | 0.89 | 12.0 | 8.8 | 0.96 | 11.2 | 8.1 | 1.02 | 10.3 | 7.5 | 1.07 |
| | 63 | 13.1 | 11.3 | 0.77 | 12.1 | 10.5 | 0.85 | 11.3 | 9.7 | 0.92 | 10.3 | 8.9 | 0.98 | 9.4 | 8.1 | 1.02 |
| MUZ-FE18NA | 71 | 22.1 | 15.6 | 1.13 | 20.6 | 14.6 | 1.24 | 19.4 | 13.7 | 1.33 | 18.0 | 12.7 | 1.40 | 16.6 | 11.7 | 1.46 |
| | 67 | 20.9 | 17.5 | 1.07 | 19.4 | 16.3 | 1.17 | 18.0 | 15.1 | 1.27 | 16.7 | 14.1 | 1.35 | 15.4 | 12.9 | 1.41 |
| | 63 | 19.6 | 19.1 | 1.02 | 18.2 | 17.7 | 1.12 | 16.9 | 16.5 | 1.21 | 15.4 | 15.0 | 1.30 | 14.0 | 13.7 | 1.35 |

NOTE: 1. IWB : Intake air wet-bulb temperature

TC : Total Capacity (x10³ Btu/h)

SHC : Sensible Heat Capacity (x10³ Btu/h)

TPC : Total Power Consumption (kW)

2. SHC is based on 80°F of indoor Intake air DB temperature.

2) COOLING CAPACITY CORRECTIONS

| | Refrigerant piping length (one way: ft.) | | | |
|--------------------------|--|-------|-------|-------|
| | 25 (std.) | 40 | 65 | 100 |
| MUZ-FE09NA MUZ-FE12NA | 1.0 | 0.954 | 0.878 | - |
| MUZ-FE18NA | 1.0 | 0.954 | 0.878 | 0.771 |

3) HEATING CAPACITY

| Model | Indoor air IDB (°F) | Outdoor intake air WB temperature (°F) | | | | | | | | | | | | | |
|------------|------------------------|--|------|------|------|------|------|------|------|------|------|------|------|------|------|
| | | 5 | | 15 | | 25 | | 35 | | 43 | | 45 | | 55 | |
| | | TC | TPC | TC | TPC | TC | TPC | TC | TPC | TC | TPC | TC | TPC | TC | TPC |
| MUZ-FE09NA | 75 | 4.8 | 0.44 | 6.3 | 0.56 | 7.9 | 0.66 | 9.4 | 0.73 | 10.6 | 0.77 | 11.0 | 0.78 | 12.4 | 0.81 |
| | 70 | 5.2 | 0.42 | 6.7 | 0.54 | 8.2 | 0.64 | 9.6 | 0.71 | 10.9 | 0.75 | 11.2 | 0.77 | 12.7 | 0.80 |
| | 65 | 5.5 | 0.41 | 6.9 | 0.52 | 8.6 | 0.62 | 10.0 | 0.69 | 11.2 | 0.73 | 11.6 | 0.74 | 13.0 | 0.78 |
| MUZ-FE12NA | 75 | 6.0 | 0.58 | 7.9 | 0.73 | 9.9 | 0.86 | 11.8 | 0.96 | 13.3 | 1.00 | 13.7 | 1.02 | 15.5 | 1.06 |
| | 70 | 6.5 | 0.55 | 8.4 | 0.71 | 10.2 | 0.84 | 12.0 | 0.93 | 13.6 | 0.98 | 14.0 | 1.00 | 15.8 | 1.04 |
| | 65 | 6.8 | 0.53 | 8.6 | 0.68 | 10.7 | 0.81 | 12.4 | 0.91 | 14.0 | 0.96 | 14.4 | 0.97 | 16.2 | 1.02 |
| MUZ-FE18NA | 75 | 9.5 | 0.91 | 12.5 | 1.15 | 15.7 | 1.35 | 18.7 | 1.50 | 21.1 | 1.58 | 21.7 | 1.60 | 24.6 | 1.66 |
| | 70 | 10.3 | 0.87 | 13.3 | 1.11 | 16.2 | 1.32 | 19.1 | 1.46 | 21.6 | 1.54 | 22.2 | 1.57 | 25.2 | 1.63 |
| | 65 | 10.8 | 0.83 | 13.6 | 1.06 | 17.0 | 1.27 | 19.8 | 1.42 | 22.2 | 1.50 | 22.9 | 1.52 | 25.7 | 1.60 |

NOTE: 1. IDB : Intake air dry-bulb temperature

TC : Total Capacity (x10³ Btu/h)

TPC : Total Power Consumption (kW)


2. Above data is for heating operation without any frost.

How to operate with fixed operational frequency of the compressor.


1. Press the EMERGENCY OPERATION switch on the front of the indoor unit, and select either EMERGENCY COOL mode or EMERGENCY HEAT mode before starting to operate the air conditioner.
2. The compressor starts with operational frequency.
3. The fan speed of the indoor unit is High.
4. This operation continues for 30 minutes.
5. In order to release this operation, press the EMERGENCY OPERATION switch twice or once, or press any button on the remote controller.

7-2. PERFORMANCE CURVE


Cooling

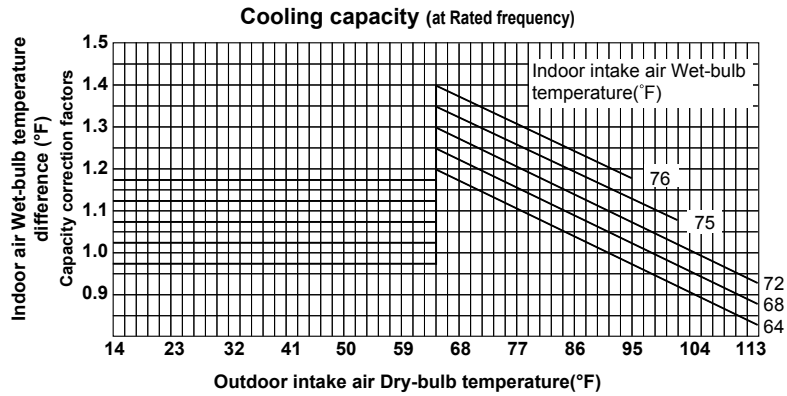


MUZ-FE09NA

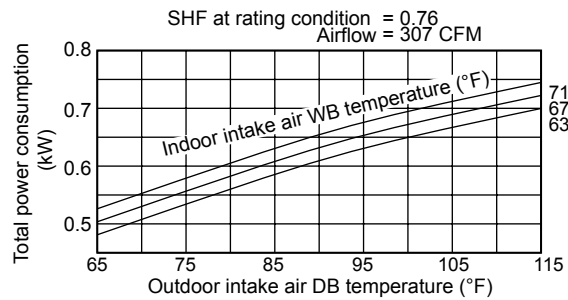

MUZ-FE12NA

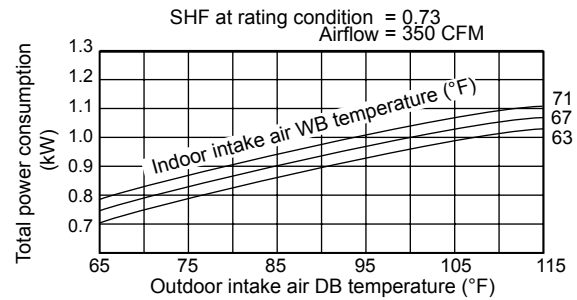


MUZ-FE18NA

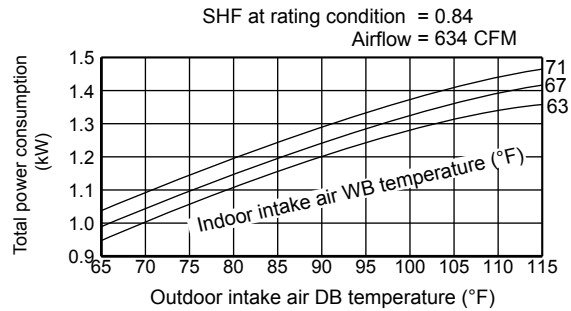


This value of frequency is not the same as the actual frequency in operating. Refer to 7-5 and 7-6 for the relationships between frequency and capacity.


Heating

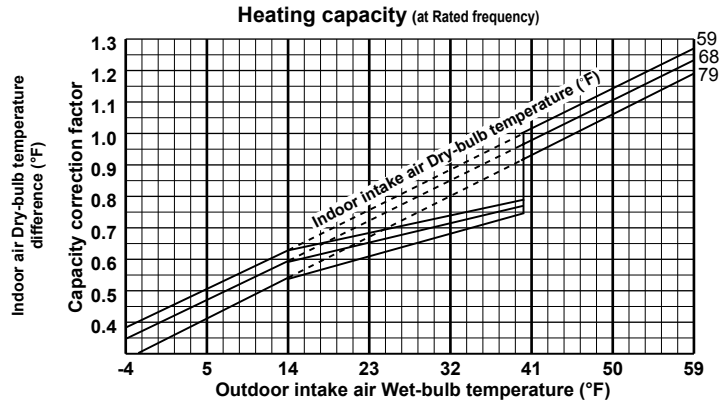


MUZ-FE09NA

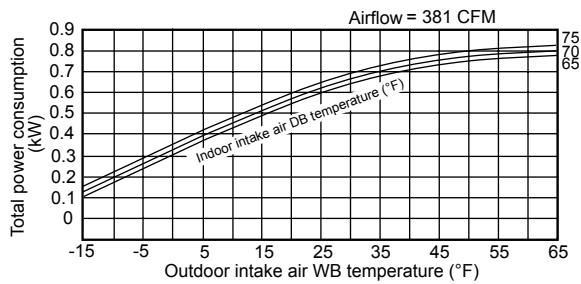

MUZ-FE12NA

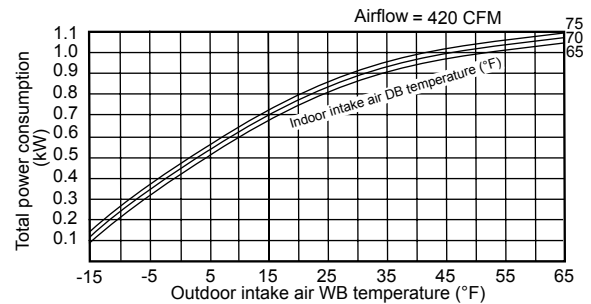

MUZ-FE18NA

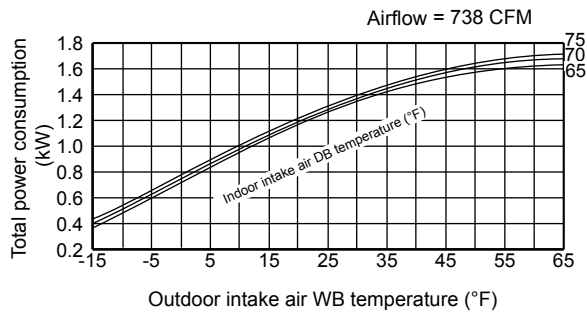

This value of frequency is not the same as the actual frequency in operating. Refer to 7-5 and 7-6 for the relationships between frequency and capacity.



7-3. CONDENSING PRESSURE

Cooling



Data is based on the condition of indoor humidity 50 %.

Air flow should be set to High speed.



MUZ-FE09NA

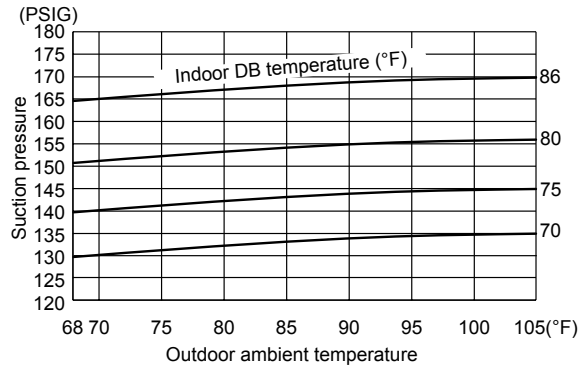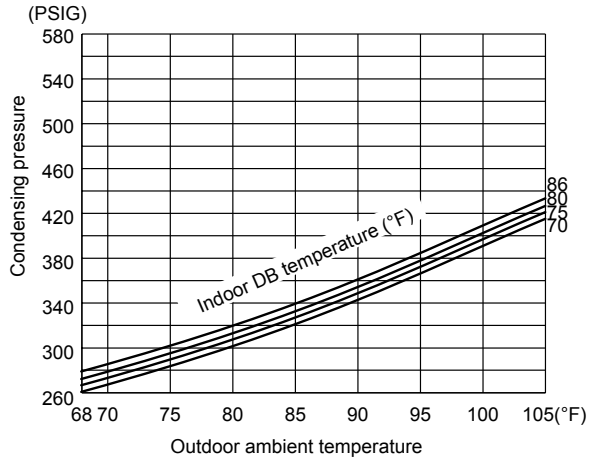

MUZ-FE12NA

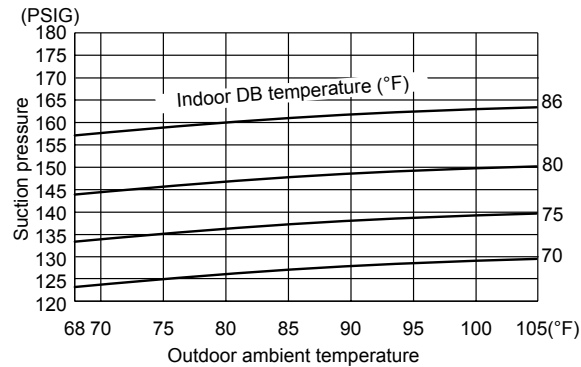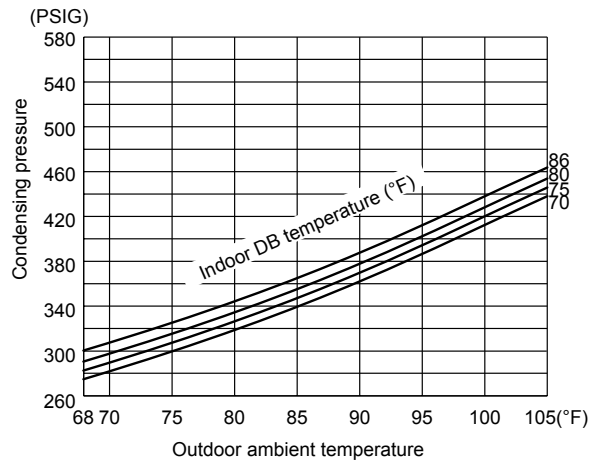

MUZ-FE18NA

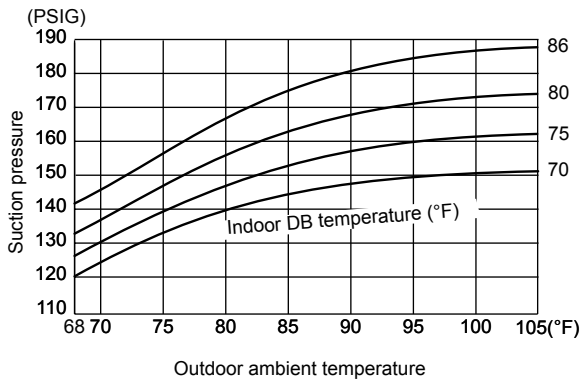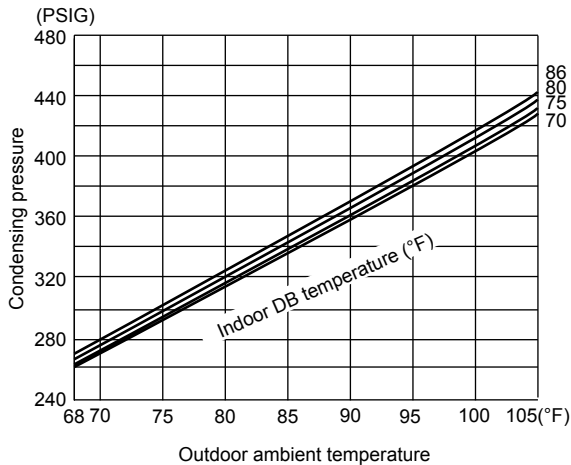



Heating

Data is based on the condition of outdoor humidity 75%.



Air flow should be set to High speed.

Data is for heating operation without any frost.



MUZ-FE09NA

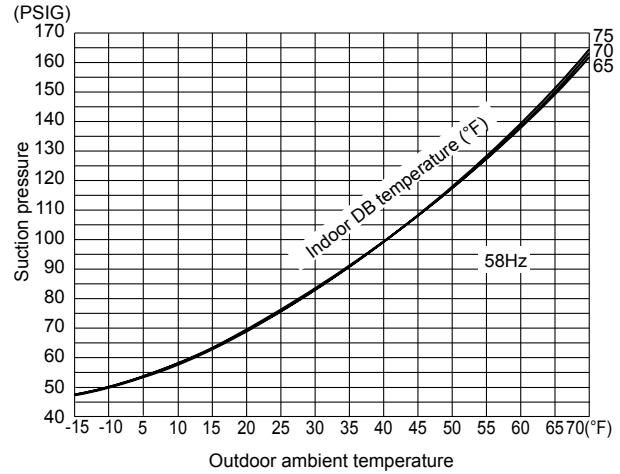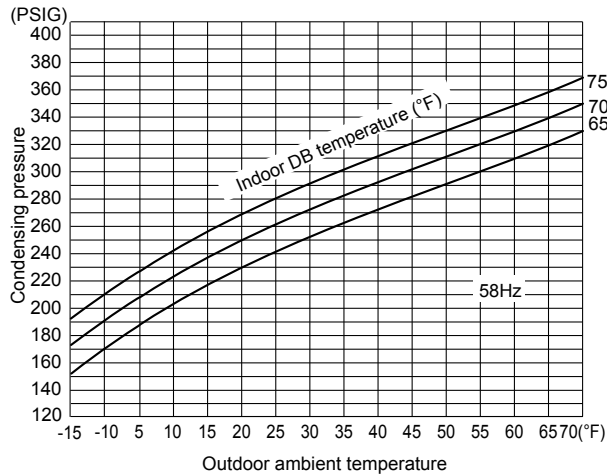

MUZ-FE12NA

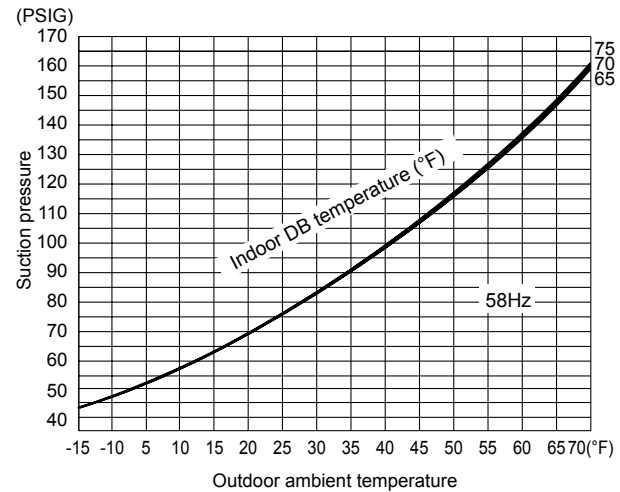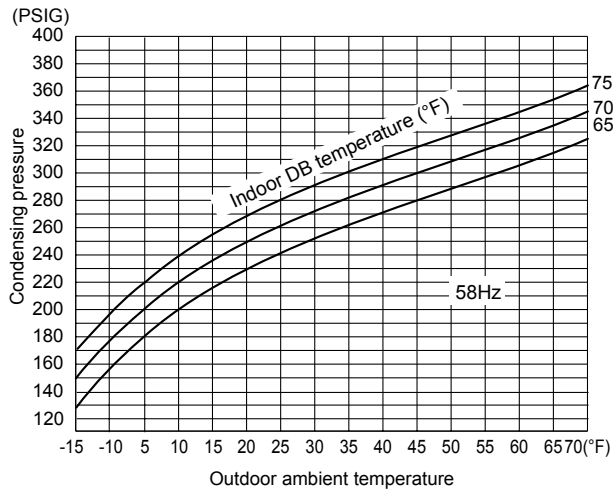

MUZ-FE18NA

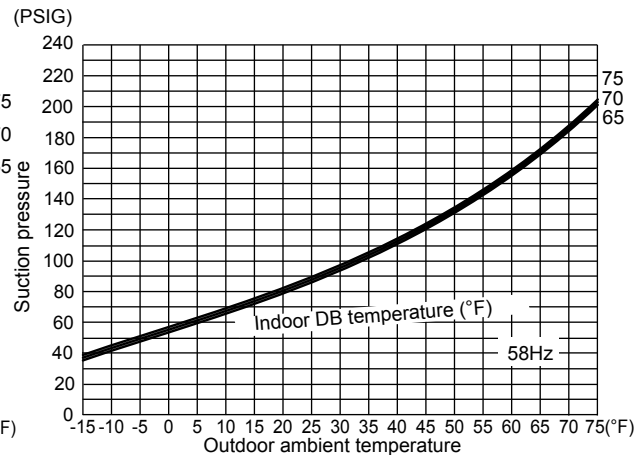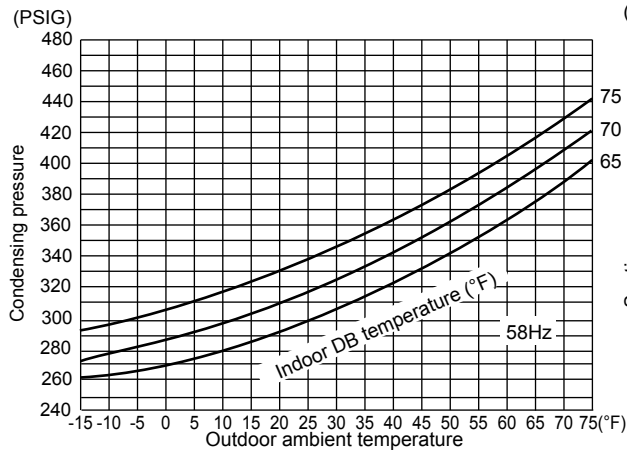


7-4. STANDARD OPERATION DATA


| Model | | | MSZ-FE09NA | | MSZ-FE12NA | | MSZ-FE18NA | | |
|---------------------|--------------------------------|--------------------|----------------|-----------|------------|-----------|------------|-----------|-----------|
| Item | | Unit | Cooling | Heating | Cooling | Heating | Cooling | Heating | |
| Total | Capacity | Btu/h | 9,000 | 10,900 | 12,000 | 13,600 | 18,000 | 21,600 | |
| | SHF | — | 0.76 | — | 0.73 | — | 0.84 | — | |
| | Input | kW | 0.580 | 0.710 | 0.930 | 0.950 | 1.800 | 2.200 | |
| | Rated frequency | Hz | 34 | 42 | 51 | 52.5 | 50.5 | 62.5 | |
| Electrical circuit | Indoor unit | | MSZ-FE09NA | | MSZ-FE12NA | | MSZ-FE18NA | | |
| | Power supply | V, phase, Hz | 208/230, 1, 60 | | | | | | |
| | Input | kW | 0.018 | 0.024 | 0.024 | 0.030 | 0.058 | | |
| | Fan motor current | A | 0.19/0.17 | 0.25/0.23 | 0.25/0.23 | 0.32/0.29 | 0.56/0.51 | | |
| | Outdoor unit | | MUZ-FE09NA | | MUZ-FE12NA | | MUZ-FE18NA | | |
| | Power supply | V, phase, Hz | 208/230, 1, 60 | | | | | | |
| | Input | kW | 0.562 | 0.686 | 0.906 | 0.920 | 1.212 | 1.482 | |
| | Comp. current | A | 2.38/2.15 | 2.98/2.70 | 4.05/3.66 | 4.12/3.72 | 4.47/4.04 | 5.72/5.17 | |
| | Fan motor current | A | 0.35/0.32 | | | | | 1.16/1.05 | 1.13/1.02 |
| Refrigerant circuit | Condensing pressure | PSIG | 376 | 355 | 402 | 392 | 373 | 357 | |
| | Suction pressure | PSIG | 154 | 108 | 148 | 104 | 151 | 107 | |
| | Discharge temperature | °F | 142 | 145 | 160 | 158 | 150 | 159 | |
| | Condensing temperature | °F | 112 | 108 | 117 | 115 | 111 | 105 | |
| | Suction temperature | °F | 53 | 36 | 53 | 34 | 58 | 41 | |
| | Comp. shell bottom temperature | °F | 144 | 128 | 146 | 129 | 132 | 136 | |
| | Ref. pipe length | ft. | 25 | | | | | | |
| | Refrigerant charge (R410A) | | 2 lb. 9 oz. | | | | 4 lb 3 oz. | | |
| Indoor unit | Intake air temperature | DB | °F | 80 | 70 | 80 | 70 | 80 | 70 |
| | | WB | °F | 67 | 60 | 67 | 60 | 67 | 60 |
| | Discharge air temperature | DB | °F | 59 | 99 | 58 | 101 | 59 | 102 |
| | | WB | °F | 56 | — | 55 | — | 56 | — |
| | Fan speed (High) | rpm | 1,020 | 1,120 | 1,120 | 1,220 | 1,300 | | |
| Airflow (High) | | CFM | 307 (Wet) | 381 | 350 (Wet) | 420 | 634 (Wet) | 738 | |
| Outdoor unit | Intake air temperature | DB | °F | 95 | 47 | 95 | 47 | 95 | 47 |
| | | WB | °F | — | 43 | — | 43 | — | 43 |
| | Fan speed | rpm | 810 | 870 | 810 | 870 | 840 | 810 | |
| | Airflow | CFM | 1,102 | 1,187 | 1,102 | 1,187 | 1,769 | 1,701 | |

7-5. CAPACITY AND INPUT CORRECTION BY INVERTER OUTPUT FREQUENCY


MUZ-FE09NA

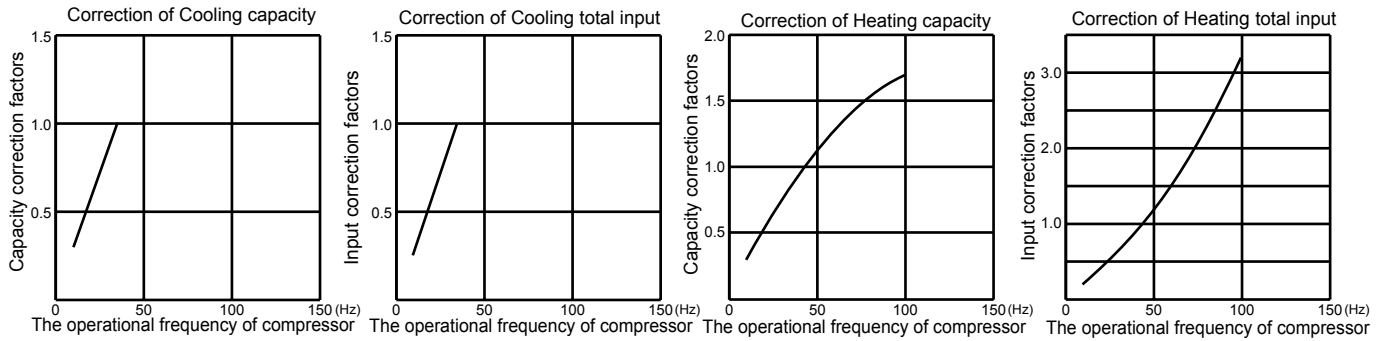

MUZ-FE12NA

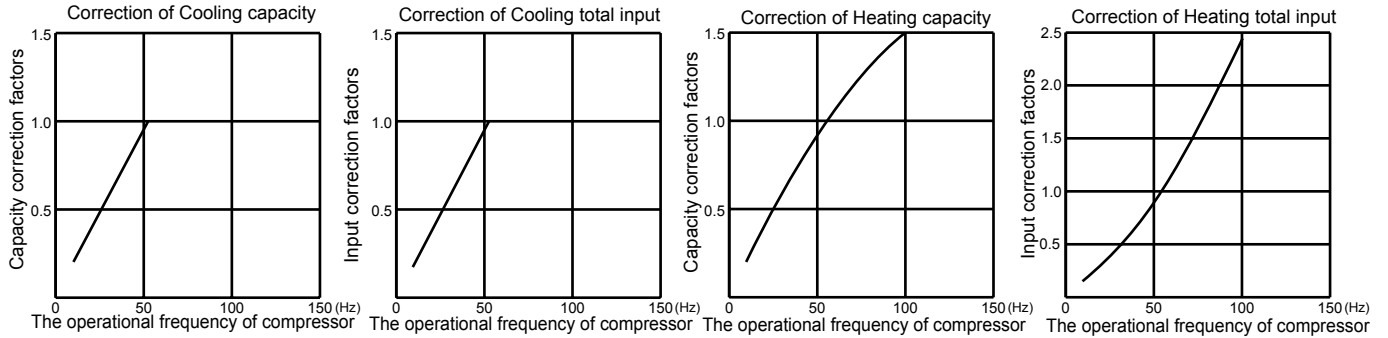

MUZ-FE18NA

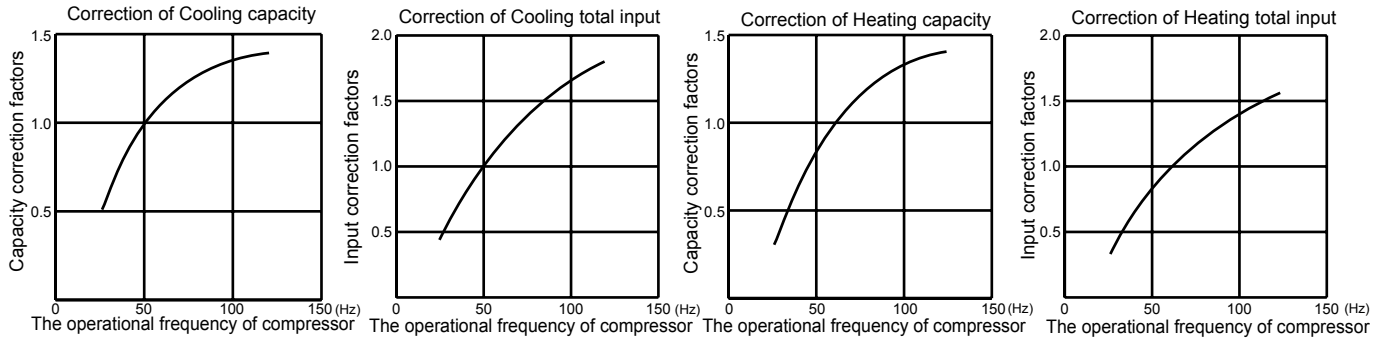

7-6. HOW TO OPERATE FIXED-FREQUENCY OPERATION (Test run operation)


1. Press EMERGENCY OPERATION switch to start COOL or HEAT mode (COOL: Press once, HEAT: Press twice).
2. Test run operation starts and continues to operate for 30 minutes.
3. Compressor operates at rated frequency in COOL mode or 58 Hz in HEAT mode.
4. Indoor fan operates at High speed.
5. After 30 minutes, test run operation finishes and EMERGENCY OPERATION starts (operation frequency of compressor varies).
6. To cancel test run operation (EMERGENCY OPERATION), press EMERGENCY OPERATION switch or any button on remote controller.

MUZ-FE09NA MUZ-FE12NA MUZ-FE18NA**8-1. OUTDOOR FAN MOTOR CONTROL**

The fan motor turns ON/OFF, interlocking with the compressor.

[ON] The fan motor turns ON 5 seconds before the compressor starts up.

[OFF] The fan motor turns OFF 15 seconds after the compressor has stopped running.

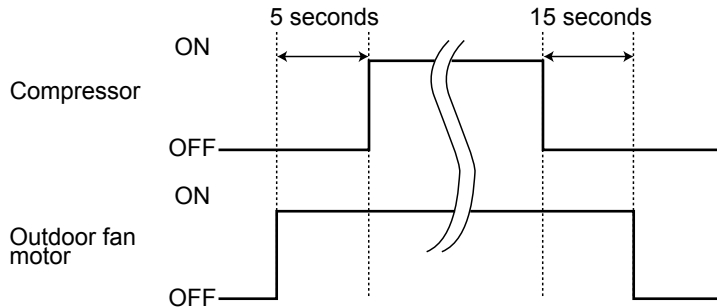
**8-2. R.V. COIL CONTROL**

Heating ON

Cooling OFF

Dry OFF

NOTE: The 4-way valve reverses for 5 seconds right before start-up of the compressor.

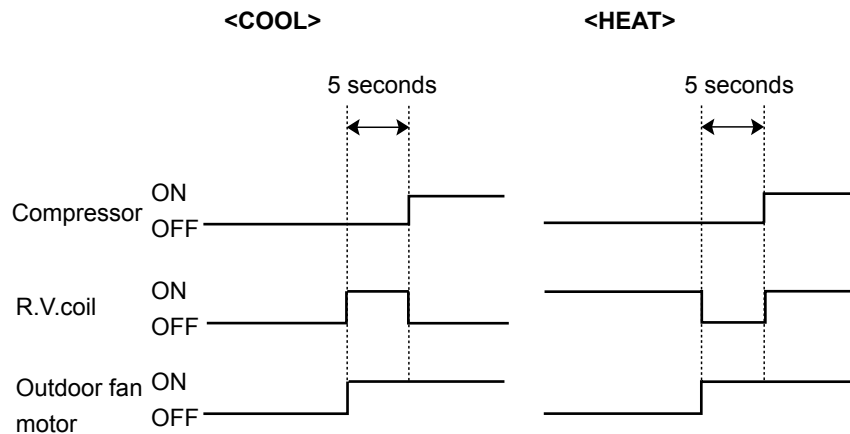**8-3. RELATION BETWEEN MAIN SENSOR AND ACTUATOR**

| Sensor | Purpose | Actuator | | | | |
|---|-----------------------------------|------------|-----|-------------------|-----------|------------------|
| | | Compressor | LEV | Outdoor fan motor | R.V. coil | Indoor fan motor |
| Discharge temperature thermistor | Protection | ○ | ○ | | | |
| Indoor coil temperature thermistor | Cooling: Coil frost prevention | ○ | | | | |
| | Heating: High pressure protection | ○ | ○ | | | |
| Defrost thermistor | Cooling: High pressure protection | ○ | ○ | | | |
| | Heating: Defrosting | ○ | ○ | ○ | ○ | ○ |
| Fin temperature thermistor | Protection | ○ | | ○ | | |
| Outdoor heat exchanger temperature thermistor | High pressure protection | ○ | ○ | ○ | | |
| Ambient temperature thermistor | Low ambient temperature operation | ○ | ○ | ○ | | |

9

SERVICE FUNCTIONS

MUZ-FE09NA MUZ-FE12NA MUZ-FE18NA

9-1. CHANGE IN DEFROST SETTING

Changing defrost finish temperature

<JS> To change the defrost finish temperature, cut/solder the JS wire of the outdoor inverter P.C. board (Refer to 10-6.1.).

| Jumper | | Defrost finish temperature | |
|--------|-------------------------------|----------------------------|-------------|
| | | MUZ-FE09/12NA | MUZ-FE18NA |
| JS | Soldered (Initial setting) | 41°F (5°C) | 50°F (10°C) |
| | None (Cut) | 50°F (10°C) | 64°F (18°C) |

9-2. PRE-HEAT CONTROL SETTING

PRE-HEAT CONTROL

When moisture gets into the refrigerant cycle, it may interfere the start-up of the compressor at low outside temperature. The pre-heat control prevents this interference. The pre-heat control turns ON when outside temperature is 68°F (20°C) or below. When pre-heat control is turned ON, compressor is energized. (About 50 W)

<JK> To activate the pre-heat control, cut the JK wire of the inverter P.C. board (Refer to 10-6.1.).

NOTE: When the inverter P.C. board is replaced, check the Jumper wires, and cut/solder them if necessary.

10

TROUBLESHOOTING

MUZ-FE09NA MUZ-FE12NA MUZ-FE18NA

10-1. CAUTIONS ON TROUBLESHOOTING


1. Before troubleshooting, check the following

- 1) Check the power supply voltage.
- 2) Check the indoor/outdoor connecting wire for miswiring.

2. Take care of the following during servicing


- 1) Before servicing the air conditioner, be sure to turn OFF the main unit first with the remote controller, then after confirming the horizontal vane is closed, turn off the breaker and/or disconnect the power plug.
- 2) Be sure to turn OFF the power supply before removing the front panel, the cabinet, the top panel, and the electronic control P.C. board.
- 3) When removing the electrical parts, be careful of the residual voltage of smoothing capacitor.
- 4) When removing the electronic control P.C. board, hold the edge of the board with care NOT to apply stress on the components.
- 5) When connecting or disconnecting the connectors, hold the housing of the connector. DO NOT pull the lead wires.

<Incorrect>

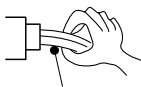

Lead wiring

<Correct>

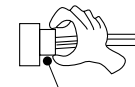

Housing point

3. Troubleshooting procedure

- 1) First, check if the OPERATION INDICATOR lamp on the indoor unit is flashing on and off to indicate an abnormality. To make sure, check how many times the abnormality indication is flashing on and off before starting service work.
- 2) Before servicing, check that the connector and terminal are connected properly.
- 3) When the electronic control P.C. board seems to be defective, check the copper foil pattern for disconnection and the components for bursting and discoloration.
- 4) Refer to 10-2 and 10-3.

10-2. FAILURE MODE RECALL FUNCTION

Outline of the function





This air conditioner can memorize the abnormal condition which has occurred once.

Even though LED indication listed on the troubleshooting check table (10-3.) disappears, the memorized failure details can be recalled.

1. Flow chart of failure mode recall function for the indoor/outdoor unit


MSZ-FE09NA
MSZ-FE12NA

MSZ-FE18NA

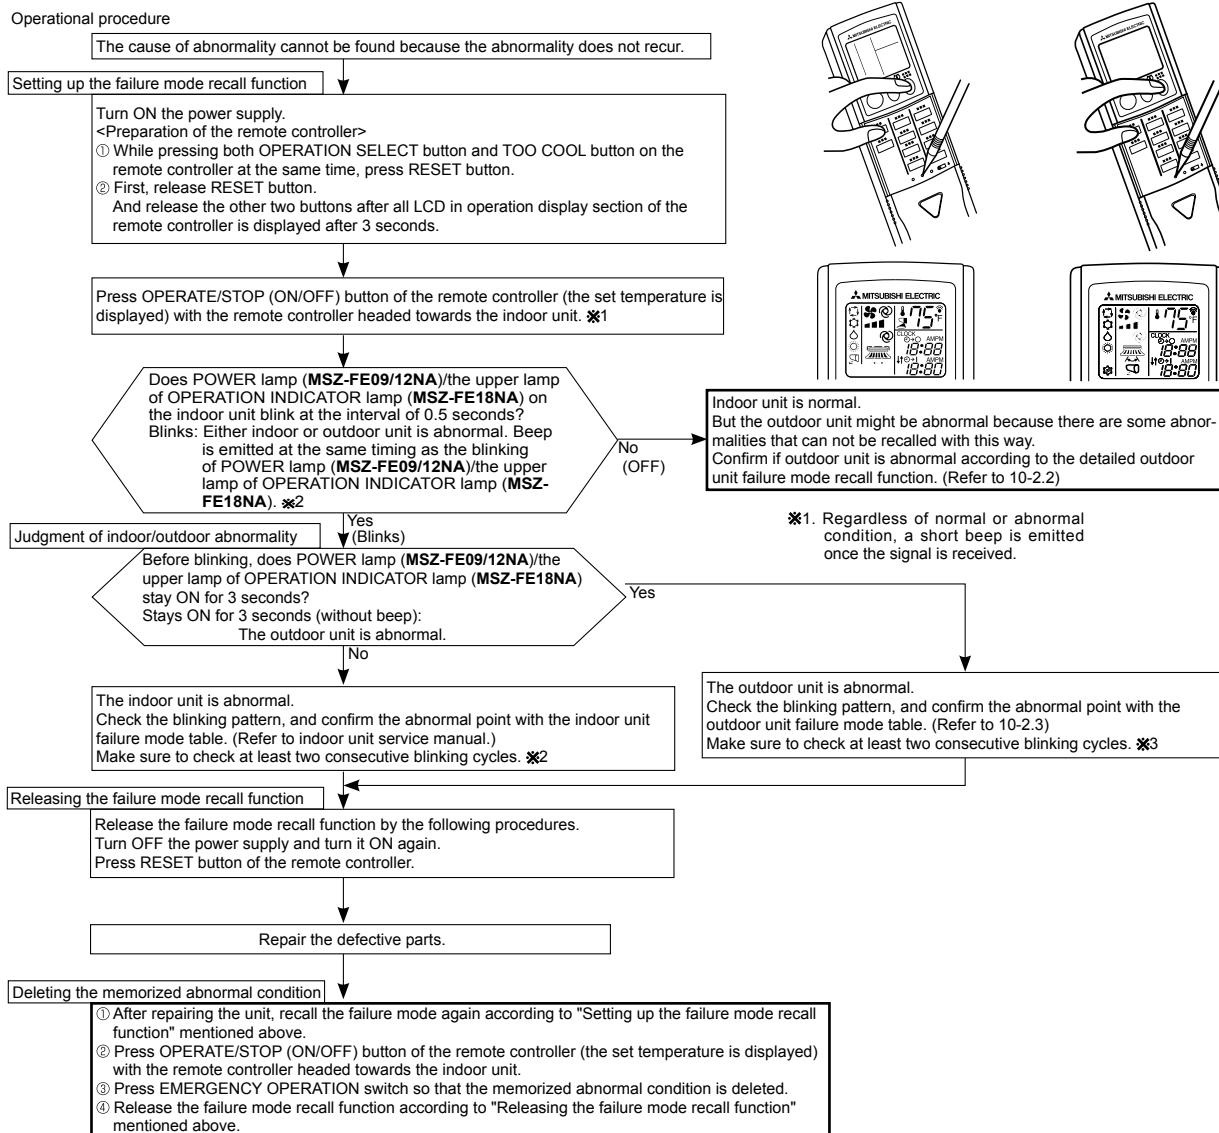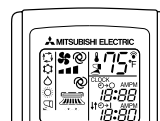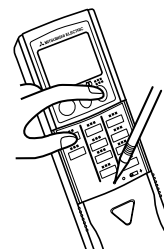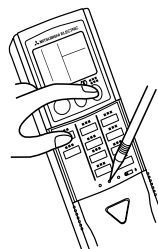


NOTE: 1. Make sure to release the failure mode recall function once it is set up, otherwise the unit cannot operate properly.
2. If the abnormal condition is not deleted from the memory, the last abnormal condition is kept memorized.

※2. Blinking pattern when the indoor unit is abnormal:

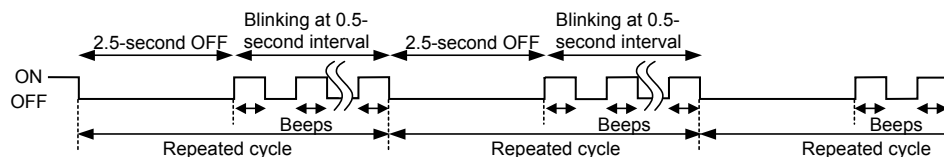


※3. Blinking pattern when the outdoor unit is abnormal:

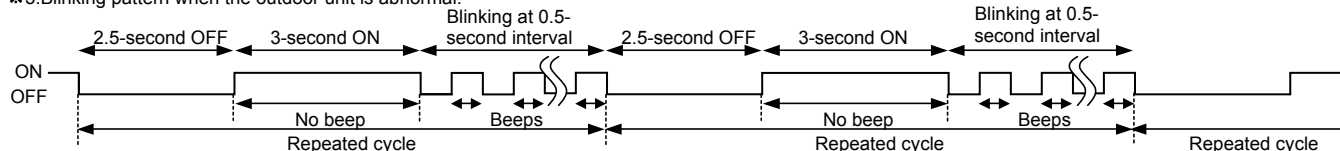


2. Flow chart of the detailed outdoor unit failure mode recall function

Operational procedure

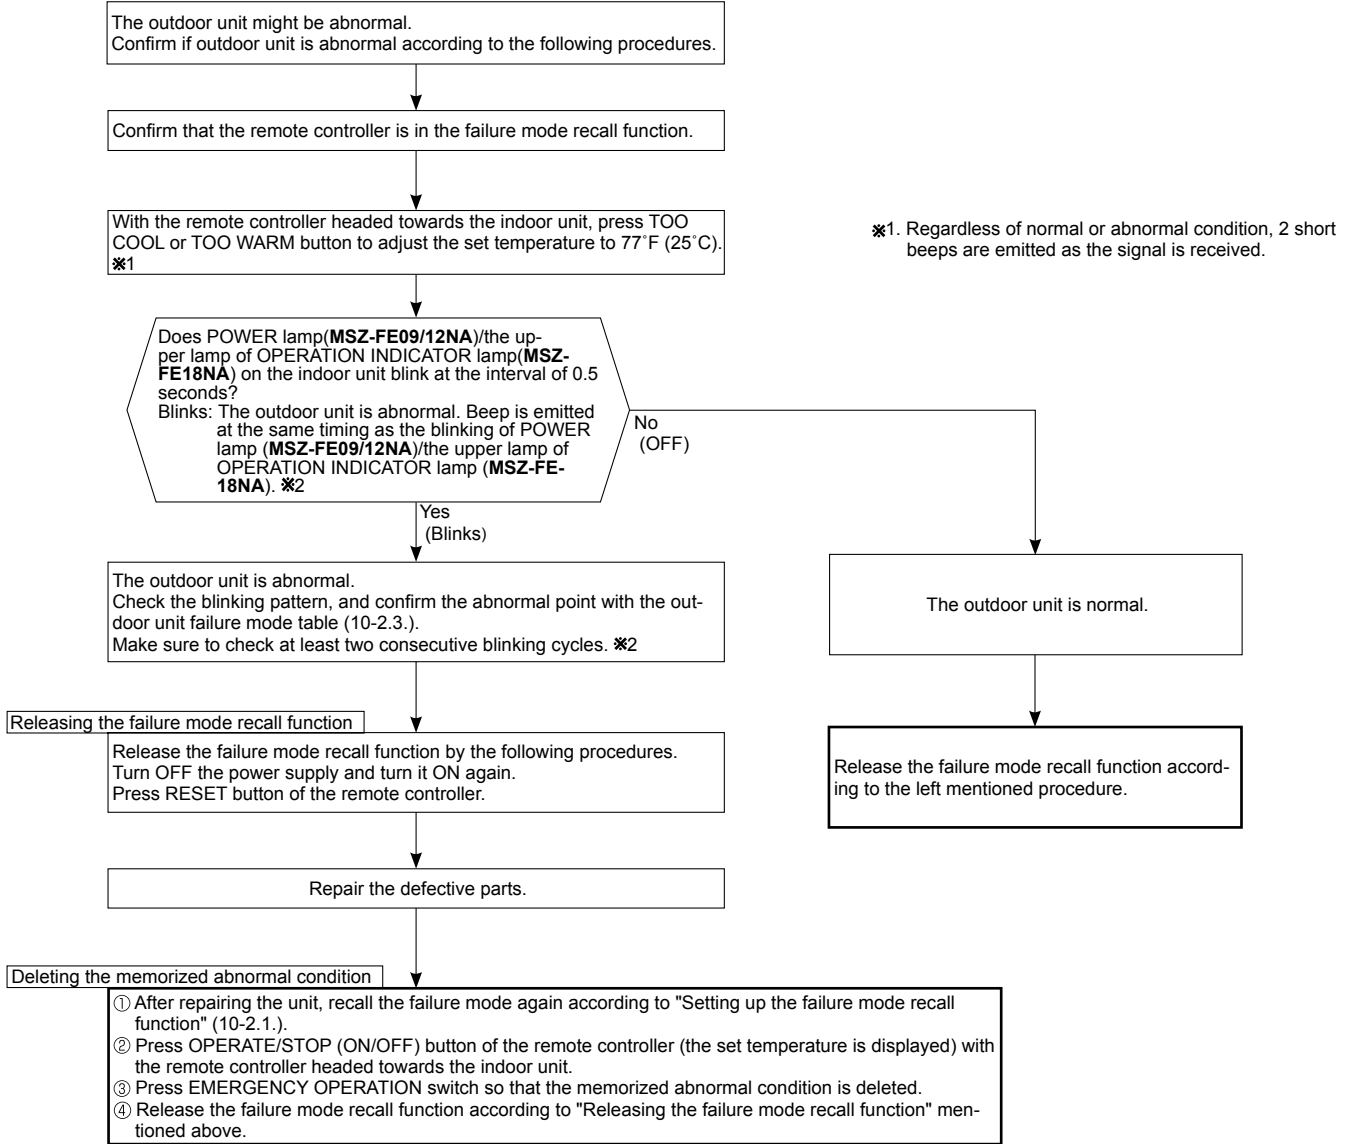

NOTE: 1. Make sure to release the failure mode recall function once it is set up, otherwise the unit cannot operate properly.
2. If the abnormal condition is not deleted from the memory, the last abnormal condition is kept memorized.

※2. Blinking pattern when outdoor unit is abnormal:

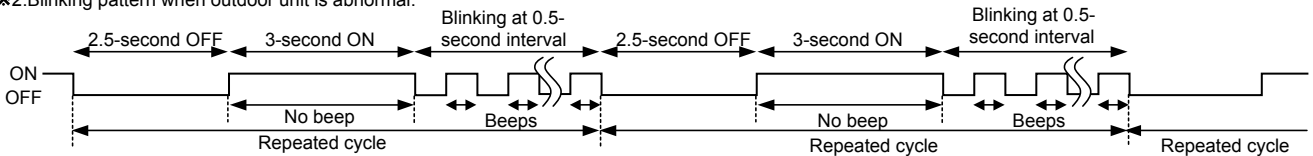

3. Outdoor unit failure mode table

| OPERATION INDICATOR POWER lamp Upper lamp (Indoor unit) | Abnormal point (Failure mode/protection) | LED indication (Outdoor P.C. board) | Condition | Remedy | Indoor/ outdoor unit failure mode recall function | Outdoor unit failure mode recall function |
|--|---|--|--|---|--|---|
| OFF | None (Normal) | — | — | — | — | — |
| 2-time flash 2.5 seconds OFF | Outdoor power system | — | Overcurrent protection stop is continuously performed 3 times within 1 minute after the compressor gets started. | <ul style="list-style-type: none"> •Reconnect connectors. •Refer to 10-5. ④"How to check inverter/compressor". •Check stop valve. | ○ | ○ |
| 3-time flash 2.5 seconds OFF | Discharge temperature thermistor | 1-time flash every 2.5 seconds | Thermistor shorts or opens during compressor running. | <ul style="list-style-type: none"> •Refer to 10-5. ④"Check of outdoor thermistors". Defective outdoor thermistors can be identified by checking the blinking pattern of LED. | ○ | ○ |
| | Defrost thermistor | | | | | |
| | Fin temperature thermistor | 3-time flash 2.5 seconds OFF | | | | |
| | P.C. board temperature thermistor | 4-time flash 2.5 seconds OFF | | | | |
| | Ambient temperature thermistor | 2-time flash 2.5 seconds OFF | | | | |
| 4-time flash 2.5 seconds OFF | Overcurrent | 11-time flash 2.5 seconds OFF | Large current flows into intelligent power module. | <ul style="list-style-type: none"> •Reconnect compressor connector. •Refer to 10-5. ④"How to check inverter/compressor". •Check stop valve. | — | ○ |
| | Compressor synchronous abnormality (Compressor start-up failure protection) | 12-time flash 2.5 seconds OFF | Waveform of compressor current is distorted. | <ul style="list-style-type: none"> •Reconnect compressor connector. •Refer to 10-5. ④"How to check inverter/compressor". | — | ○ |
| 5-time flash 2.5 seconds OFF | Discharge temperature | — | Temperature of discharge temperature thermistor exceeds 241°F (116°C), compressor stops. Compressor can restart if discharge temperature thermistor reads 212°F (100°C) or less 3 minutes later. | <ul style="list-style-type: none"> •Check refrigerant circuit and refrigerant amount. •Refer to 10-5. ④"Check of LEV". | — | ○ |
| 6-time flash 2.5 seconds OFF | High pressure | — | Temperature of indoor coil thermistor exceeds 158°F (70°C) in HEAT mode. Temperature of defrost thermistor exceeds 158°F (70°C) in COOL mode. | <ul style="list-style-type: none"> •Check refrigerant circuit and refrigerant amount. •Check stop valve. | — | ○ |
| 7-time flash 2.5 seconds OFF | Fin temperature/ P.C. board temperature | 7-time flash 2.5 seconds OFF | Temperature of fin temperature thermistor on the inverter P.C. board exceeds 167 ~ 176°F (75 ~ 80°C), or temperature of P.C. board temperature thermistor on the inverter P.C. board exceeds 158 ~ 167°F (70 ~ 75°C). | <ul style="list-style-type: none"> •Check around outdoor unit. •Check outdoor unit air passage. •Refer to 10-5. ①"Check of outdoor fan motor". | — | ○ |
| 8-time flash 2.5 seconds OFF | Outdoor fan motor | — | Outdoor fan has stopped 3 times in a row within 30 seconds after outdoor fan start-up. | <ul style="list-style-type: none"> •Refer to 10-5. ①"Check of outdoor fan motor". Refer to 10-5. ④"Check of inverter P.C. board". | — | ○ |
| 9-time flash 2.5 seconds OFF | Nonvolatile memory data | 5-time flash 2.5 seconds OFF | Nonvolatile memory data cannot be read properly. | •Replace the inverter P.C. board. | ○ | ○ |
| | MUZ-FE18NA Power module | 6-time flash 2.5 seconds OFF | The interphase short circuit occurs in the output of the intelligent power module (IPM). The compressor winding shorts circuit. | •Refer to 10-5. ④"How to check inverter/compressor". | | |
| 10-time flash 2.5 seconds OFF | Discharge temperature | — | Temperature of discharge temperature thermistor has been 122°F (50°C) or less for 20 minutes. | <ul style="list-style-type: none"> •Refer to 10-5. ④"Check of LEV". •Check refrigerant circuit and refrigerant amount. | — | ○ |
| 11-time flash 2.5 seconds OFF | DC voltage | 8-time flash 2.5 seconds OFF | DC voltage of inverter cannot be detected normally. | •Refer to 10-5. ④"How to check inverter/compressor". | — | ○ |
| | Each phase current of compressor | 9-time flash 2.5 seconds OFF | Each phase current of compressor cannot be detected normally. | | | |
| 12-time flash 2.5 seconds OFF | Overcurrent Compressor open-phase | 10-time flash 2.5 seconds OFF | Large current flows into intelligent power module (IPM). The open-phase operation of compressor is detected. The interphase short circuit occurs in the output of the intelligent power module (IPM). The compressor winding shorts circuit. | <ul style="list-style-type: none"> •Reconnect compressor connector. •Refer to 10-5. ④"How to check inverter/compressor". | — | ○ |
| 14-time flash 2.5 seconds OFF | Stop valve (Closed valve) | 14-time flash 2.5 seconds OFF | Closed valve is detected by compressor current. | •Check stop valve | ○ | ○ |

NOTE: Blinking patterns of this mode differ from the ones of Troubleshooting check table (10-3.).


OPERATION INDICATOR
POWER lamp: **MSZ-FE09/12NA**
Upper lamp: **MSZ-FE18NA**

10-3. TROUBLESHOOTING CHECK TABLE


| No. | Symptom | LED indication | Abnormal point/ Condition | Condition | Remedy |
|-----|--|--------------------------------|--|---|--|
| 1 | Outdoor unit does not operate. | 1-time flash every 2.5 seconds | Outdoor power system | Overcurrent protection stop is continuously performed 3 times within 1 minute after the compressor gets started, or failure of restart of compressor has repeated 24 times. | •Reconnect connector of compressor. •Refer to 10-5.④ "How to check inverter/compressor". •Check stop valve. |
| 2 | | | Outdoor thermistors | Discharge temperature thermistor, fin temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor, P.C. board temperature thermistor or ambient temperature thermistor shorts or opens during compressor running. | •Refer to 10-5.③ "Check of outdoor thermistors". |
| 3 | | | Outdoor control system | Nonvolatile memory data cannot be read properly. [POWER lamp (MSZ-FE09/12NA)/the upper lamp of OPERATION INDICATOR lamp (MSZ-FE18NA) of the indoor unit lights up or flashes 7 times.] | •Replace inverter P.C. board. |
| 4 | | 6-time flash 2.5 seconds OFF | Serial signal | The communication fails between the indoor and outdoor unit for 3 minutes. | •Refer to 10-5.⑤ "How to check miswiring and serial signal error". |
| 5 | | 11-time flash 2.5 seconds OFF | Stop valve/ Closed valve | Closed valve is detected by compressor current. | •Check stop valve. |
| 6 | | 14-time flash 2.5 seconds OFF | Outdoor unit (Other abnormality) | Outdoor unit is defective. | •Refer to 10-2.2. "Flow chart of the detailed outdoor unit failure mode recall function". |
| 7 | 'Outdoor unit stops and restarts 3 minutes later' is repeated. | 2-time flash 2.5 seconds OFF | Overcurrent protection | Large current flows into intelligent power module. MUZ-FE09/12NA ※ When overcurrent protection occurs within 10 seconds after compressor starts, compressor restarts after 15 seconds. | •Reconnect connector of compressor. •Refer to 10-5.④ "How to check inverter/compressor". •Check stop valve. |
| 8 | | 3-time flash 2.5 seconds OFF | Discharge temperature overheat protection | Temperature of discharge temperature thermistor exceeds 241°F (116°C), compressor stops. Compressor can restart if discharge temperature thermistor reads 212°F (100°C) or less 3 minutes later. | •Check refrigerant circuit and refrigerant amount. •Refer to 10-5.⑧ "Check of LEV". |
| 9 | | 4-time flash 2.5 seconds OFF | Fin temperature /P.C. board temperature thermistor overheat protection | Temperature of fin temperature thermistor on the heat sink exceeds 167 ~ 176°F (75 ~ 80°C) or temperature of P.C. board temperature thermistor on the inverter P.C. board exceeds 158 ~ 167°F (70 ~ 75°C). | •Check around outdoor unit. •Check outdoor unit air passage. •Refer to 10-5.① "Check of outdoor fan motor". |
| 10 | | 5-time flash 2.5 seconds OFF | High pressure protection | Temperature of indoor coil thermistor exceeds 158°F (70°C) in HEAT mode. Temperature of outdoor heat exchanger temperature thermistor exceeds 158°F (70°C) in COOL mode. | •Check refrigerant circuit and refrigerant amount. •Check stop valve. |
| 11 | | 8-time flash 2.5 seconds OFF | Compressor synchronous abnormality | The waveform of compressor current is distorted. | •Reconnect connector of compressor. •Refer to 10-5.④ "How to check inverter/compressor". |
| 12 | | 10-time flash 2.5 seconds OFF | Outdoor fan motor | Outdoor fan has stopped 3 times in a row within 30 seconds after outdoor fan start-up. | •Refer to 10-5.① "Check of outdoor fan motor". •Refer to 10-5.② "Check of inverter P.C. board". |
| 13 | | 12-time flash 2.5 seconds OFF | Each phase current of compressor | Each phase current of compressor cannot be detected normally. | •Refer to 10-5.④ "How to check inverter/compressor". |
| 14 | | 13-time flash 2.5 seconds OFF | DC voltage | DC voltage of inverter cannot be detected normally. | •Refer to 10-5.④ "How to check inverter/compressor". |
| 15 | | 1-time flash 2.5 seconds OFF | Frequency drop by current protection | Current from power outlet is nearing Max. fuse size. | The unit is normal, but check the following. |
| 16 | | 3-time flash 2.5 seconds OFF | Frequency drop by high pressure protection | Temperature of indoor coil thermistor exceeds 131°F (55°C) in HEAT mode, compressor frequency lowers. | •Check if indoor filters are clogged. •Check if refrigerant is short. |
| | | | Frequency drop by defrosting in COOL mode | Indoor coil thermistor reads 46°F (8°C) or less in COOL mode, compressor frequency lowers. | •Check if indoor/outdoor unit air circulation is short cycled. |
| 17 | Outdoor unit operates. | 4-time flash 2.5 seconds OFF | Frequency drop by discharge temperature protection | Temperature of discharge temperature thermistor exceeds 232°F (111°C), compressor frequency lowers. | •Check refrigerant circuit and refrigerant amount. •Refer to 10-5.⑧ "Check of LEV". •Refer to 10-5.③ "Check of outdoor thermistors". |

NOTE: 1. The location of LED is illustrated at the right figure. Refer to 10-6.1.
2. LED is lighted during normal operation.

The flashing frequency shows the number of times the LED blinks after every 2.5-second OFF. Flashing (Example) When the flashing frequency is "2".

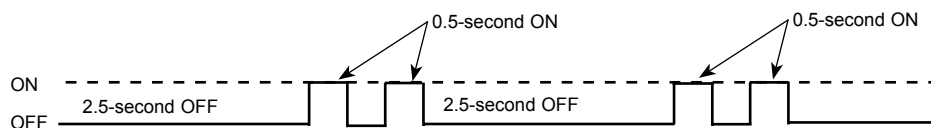

Inverter P.C. board (Parts side)

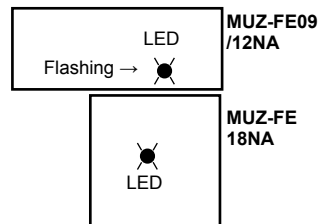



| No. | Symptom | LED indication | Abnormal point/ Condition | Condition | Remedy |
|-----|------------------------|---------------------------------|---|--|--|
| 18 | Outdoor unit operates. | 7-time flash 2.5 seconds OFF | Low discharge temperature protection | Temperature of discharge temperature thermistor has been 122°F (50°C) or less for 20 minutes. | •Refer to 10-5.Ⓔ "Check of LEV". •Check refrigerant circuit and refrigerant amount. |
| 19 | | 8-time flash 2.5 seconds OFF | MUZ-FE09/12NA PAM protection PAM: Pulse Amplitude Modulation | The overcurrent flows into IGBT (Insulated Gate Bipolar transistor: TR821) or the bus-bar voltage reaches 320 V or more, PAM stops and restarts. | This is not malfunction. PAM protection will be activated in the following cases: 1 Instantaneous power voltage drop (Short time power failure) 2 When the power supply voltage is high. |
| | | | MUZ-FE18NA Zero cross detecting circuit | Zero cross signal for PAM control cannot be detected. | |
| 20 | | 9-time flash 2.5 seconds OFF | Inverter check mode | The connector of compressor is disconnected, inverter check mode starts. | •Check if the connector of the compressor is correctly connected. Refer to 10-5.Ⓐ "How to check inverter/compressor". |


10-4. TROUBLE CRITERION OF MAIN PARTS

MUZ-FE09NA MUZ-FE12NA MUZ-FE18NA

| Part name | Check method and criterion | Figure | | | | | | | | | |
|--|---|--------------------|----------------|-------------------------------------|-----------|-------------------|---------------|------------|--|---------------|---------------|
| Defrost thermistor (RT61) Ambient temperature thermistor (RT65) Outdoor heat exchanger temperature thermistor (RT68) | Measure the resistance with a tester. Refer to 10-6. "Test point diagram and voltage", 1. "Inverter P.C. board", the chart of thermistor. | | | | | | | | | | |
| Discharge temperature thermistor (RT62) Fin temperature thermistor (RT64) | Measure the resistance with a tester. Before measurement, hold the thermistor with your hands to warm it up. Refer to 10-6. "Test point diagram and voltage", 1. "Inverter P.C. board", the chart of thermistor. | | | | | | | | | | |
| Compressor | Measure the resistance between terminals using a tester. (Winding temperature: -4 ~ 104°F (-20 ~ 40°C)) <table border="1"><thead><tr><th></th><th colspan="2">Normal</th></tr><tr><th>U-V U-W V-W</th><th>MUZ-FE09/12NA</th><th>MUZ-FE18NA</th></tr></thead><tbody><tr><td></td><td>1.52 ~ 2.17 Ω</td><td>0.83 ~ 1.18 Ω</td></tr></tbody></table> | | | Normal | | U-V U-W V-W | MUZ-FE09/12NA | MUZ-FE18NA | | 1.52 ~ 2.17 Ω | 0.83 ~ 1.18 Ω |
| | Normal | | | | | | | | | | |
| U-V U-W V-W | MUZ-FE09/12NA | MUZ-FE18NA | | | | | | | | | |
| | 1.52 ~ 2.17 Ω | 0.83 ~ 1.18 Ω | | | | | | | | | |
| Outdoor fan motor | Measure the resistance between lead wires using a tester. (Part temperature: -4 ~ 104°F (-20 ~ 40°C)) <table border="1"><thead><tr><th>Color of lead wire</th><th>Normal</th></tr></thead><tbody><tr><td>RED – BLK BLK – WHT WHT – RED</td><td>11 ~ 16 Ω</td></tr></tbody></table> | Color of lead wire | Normal | RED – BLK BLK – WHT WHT – RED | 11 ~ 16 Ω | | | | | | |
| Color of lead wire | Normal | | | | | | | | | | |
| RED – BLK BLK – WHT WHT – RED | 11 ~ 16 Ω | | | | | | | | | | |
| R. V. coil (21S4) | Measure the resistance using a tester. (Part temperature: 14 ~ 104°F (-10 ~ 40°C)) <table border="1"><thead><tr><th>Normal</th></tr></thead><tbody><tr><td>0.97 ~ 1.38 kΩ</td></tr></tbody></table> | Normal | 0.97 ~ 1.38 kΩ | | | | | | | | |
| Normal | | | | | | | | | | | |
| 0.97 ~ 1.38 kΩ | | | | | | | | | | | |
| Expansion valve coil (LEV) | Measure the resistance using a tester. (Part temperature: 14 ~ 104°F (-10 ~ 40°C)) <table border="1"><thead><tr><th>Color of lead wire</th><th>Normal</th></tr></thead><tbody><tr><td>WHT – RED</td><td rowspan="4">37 ~ 54 Ω</td></tr><tr><td>RED – ORN</td></tr><tr><td>YLW – BRN</td></tr><tr><td>BRN – BLU</td></tr></tbody></table> | Color of lead wire | Normal | WHT – RED | 37 ~ 54 Ω | RED – ORN | YLW – BRN | BRN – BLU | | | |
| Color of lead wire | Normal | | | | | | | | | | |
| WHT – RED | 37 ~ 54 Ω | | | | | | | | | | |
| RED – ORN | | | | | | | | | | | |
| YLW – BRN | | | | | | | | | | | |
| BRN – BLU | | | | | | | | | | | |

10-5. TROUBLESHOOTING FLOW

A How to check inverter/compressor

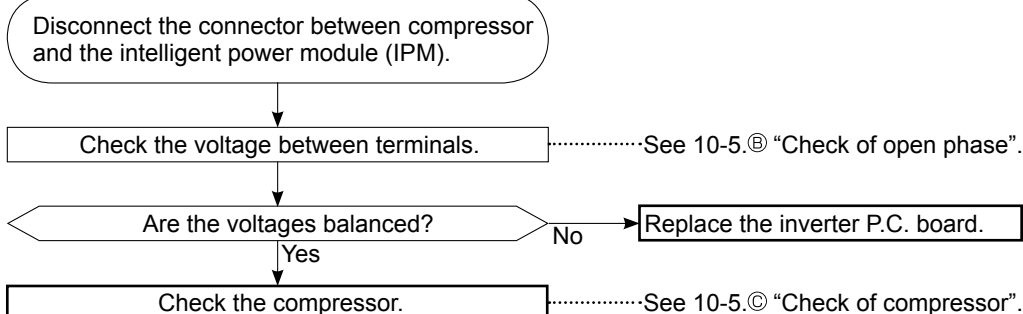

B Check of open phase

- With the connector between the compressor and the intelligent power module disconnected, activate the inverter and check if the inverter is normal by measuring **the voltage balance** between the terminals.

Output voltage is 50 - 130 V. (The voltage may differ according to the tester.)

<< Operation method>>

Start cooling or heating operation by pressing EMERGENCY OPERATION switch on the indoor unit. (TEST RUN OPERATION: Refer to 7-6.)

<<Measurement point>>

at 3 points

BLK (U) - WHT (V)


BLK (U) - RED (W)

WHT(V) - RED (W)

Measure AC voltage between the lead wires at 3 points.

- NOTE:**
- Output voltage varies according to power supply voltage.
 - Measure the voltage by analog type tester.
 - During this check, LED of the inverter P.C. board flashes 9 times. (Refer to 10-6.1.)

C Check of compressor

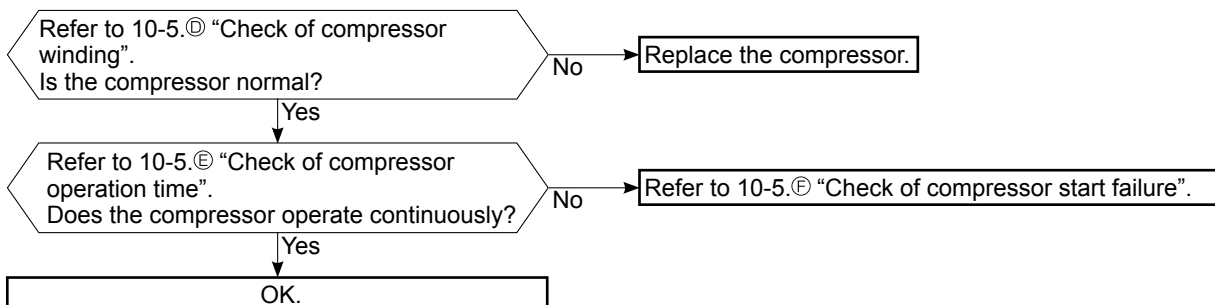

D Check of compressor winding

- Disconnect the connector between the compressor and intelligent power module, and measure the resistance between the compressor terminals.

<<Measurement point>>

at 3 points

BLK - WHT

BLK - RED

WHT - RED

※ Measure the resistance between the lead wires at 3 points.

<<Judgement>>

Refer to 10-4.

0[Ω] Abnormal [short]

Infinite [Ω] Abnormal [open]

NOTE: Be sure to zero the ohmmeter before measurement.

E Check of compressor operation time

- Connect the compressor and activate the inverter. Then measure the time until the inverter stops due to over current.

<<Operation method>>


Start heating or cooling operation by pressing EMERGENCY OPERATION switch on the indoor unit.

(TEST RUN OPERATION: Refer to 7-6.)

<<Measurement>>

Measure the time from the start of compressor to the stop of compressor due to overcurrent.

<<Judgement>>

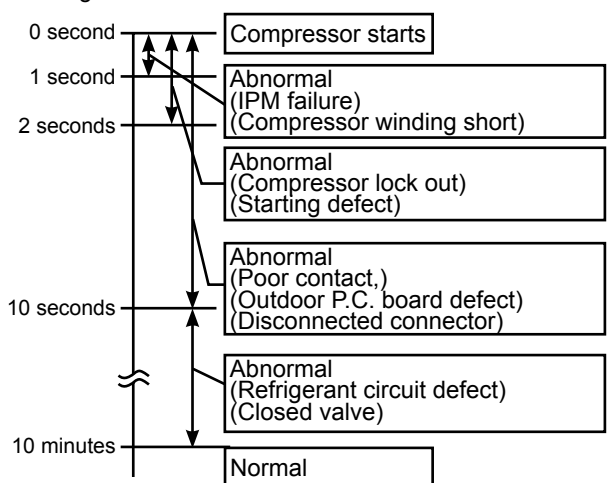

F Check of compressor start failure

Confirm that 1~4 is normal.

- Electrical circuit check

1. Contact of the compressor connector

2. Output voltage of inverter P.C. board and balance of them (See 10-5.⑥)

3. Direct current voltage between DB61(+) and (-) (**MUZ-FE09/12NA**)/JP715(+) and JP30(-) (**MUZ-FE18NA**) on the inverter P.C. board

4. Voltage between outdoor terminal block S1-S2

Does the compressor run for 10 seconds or more after it starts?

Yes

Check the refrigerant circuit.
Check the stop valve.

No


After the compressor is heated with a drier, does the compressor start? ※1

No

Replace the compressor.

Yes

Compressor start failure. Activate pre-heat control.
(Refer to 9-2. "PRE-HEAT CONTROL SETTING")

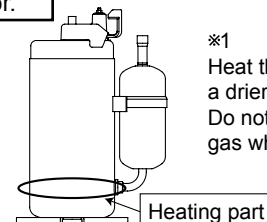

※1
Heat the compressor with a drier for about 20 minutes.
Do not recover refrigerant gas while heating.

G Check of outdoor thermistors

Disconnect the connector of thermistor in the outdoor P.C. board (see below table), and measure the resistance of thermistor.

Is the thermistor normal? (Refer to 10-6.1.)

No

Replace the thermistor except RT64. When RT64 is abnormal, replace the inverter P.C. board.

Yes

Reconnect the connector of thermistor.
Turn ON the power supply and press EMERGENCY OPERATION switch.

Does the unit operate for 10 minutes or more without showing thermistor abnormality?

No

Replace the inverter P.C. board.

Yes

OK. (Cause is poor contact.)

MUZ-FE09NA MUZ-FE12NA

| Thermistor | Symbol | Connector, Pin No. | Board |
|------------------------------------|--------|-----------------------------|---------------------|
| Defrost | RT61 | Between CN641 pin1 and pin2 | Inverter P.C. board |
| Discharge temperature | RT62 | Between CN641 pin3 and pin4 | |
| Fin temperature | RT64 | Between CN642 pin1 and pin2 | |
| Ambient temperature | RT65 | Between CN643 pin1 and pin2 | |
| Outdoor heat exchanger temperature | RT68 | Between CN644 pin1 and pin3 | |

MUZ-FE18NA

| Thermistor | Symbol | Connector, Pin No. | Board |
|------------------------------------|--------|-----------------------------|---------------------|
| Defrost | RT61 | Between CN671 pin1 and pin2 | Inverter P.C. board |
| Discharge temperature | RT62 | Between CN671 pin3 and pin4 | |
| Fin temperature | RT64 | Between CN673 pin1 and pin2 | |
| Ambient temperature | RT65 | Between CN672 pin1 and pin2 | |
| Outdoor heat exchanger temperature | RT68 | Between CN671 pin5 and pin6 | |

H Check of R.V. coil

* First of all, measure the resistance of R.V. coil to check if the coil is defective. Refer to 10-4.

* In case CN721 (MUZ-FE09/12NA)/CN602 (MUZ-FE18NA) is disconnected or R.V. coil is open, voltage is generated between the terminal pins of the connector although no signal is being transmitted to R.V. coil.

Check if CN721 (MUZ-FE09/12NA)/CN602 (MUZ-FE18NA) is connected.

Unit operates COOL mode even if it is set to HEAT mode.

Disconnect connector between the compressor and the intelligent power module.
Turn ON the power supply and press EMERGENCY OPERATION switch twice (HEAT mode).

Is there 208/230 VAC between CN721 (MUZ-FE09/12NA)/CN602 (MUZ-FE18NA) ① and ② on the inverter P.C. board 3 minutes after the power supply is turned ON?

No

Replace the inverter P.C. board.

Yes

Replace the 4-way valve.

Unit operates HEAT mode even if it is set to COOL mode.

Disconnect connector between the compressor and the intelligent power module.
Turn ON the power supply and press EMERGENCY OPERATION switch once (COOL mode).

Is there 208/230 VAC between CN721 (MUZ-FE09/12NA)/CN602 (MUZ-FE18NA) ① and ② on the inverter P.C. board 3 minutes after the power supply is turned ON?

Yes

Replace the inverter P.C. board.

No

Replace the 4-way valve.

① Check of outdoor fan motor

MUZ-FE09NA MUZ-FE12NA

Disconnect CN932 from the inverter P.C. board, and measure the resistance of the outdoor fan motor.

Is the outdoor fan motor normal?
(Refer to 10-4.)

No

Replace the outdoor fan motor.

Yes

Replace the inverter P.C. board.

MUZ-FE18NA

Disconnect the connectors CN931 and CN932 from the inverter P.C. board.
Check the connection between the connector CN931 and CN932.

Is the resistance between each terminal of outdoor fan motor normal?
(Refer to 10-4.)

Yes

No

Disconnect CN932 from the inverter P.C. board, and turn on the power supply.

Rotate the outdoor fan motor manually and measure the voltage of CN931.
Between 1(+) and 5(-)
Between 2(+) and 5(-)
Between 3(+) and 5(-)

(Fixed to either 5 or 0 VDC)

No

Does the voltage between each terminal become 5 and 0 VDC repeatedly?

Yes

No

Does the outdoor fan motor rotate smoothly?


Yes

Replace the outdoor fan motor.


Replace the inverter P.C. board.

J Check of power supply

MUZ-FE09NA MUZ-FE12NA


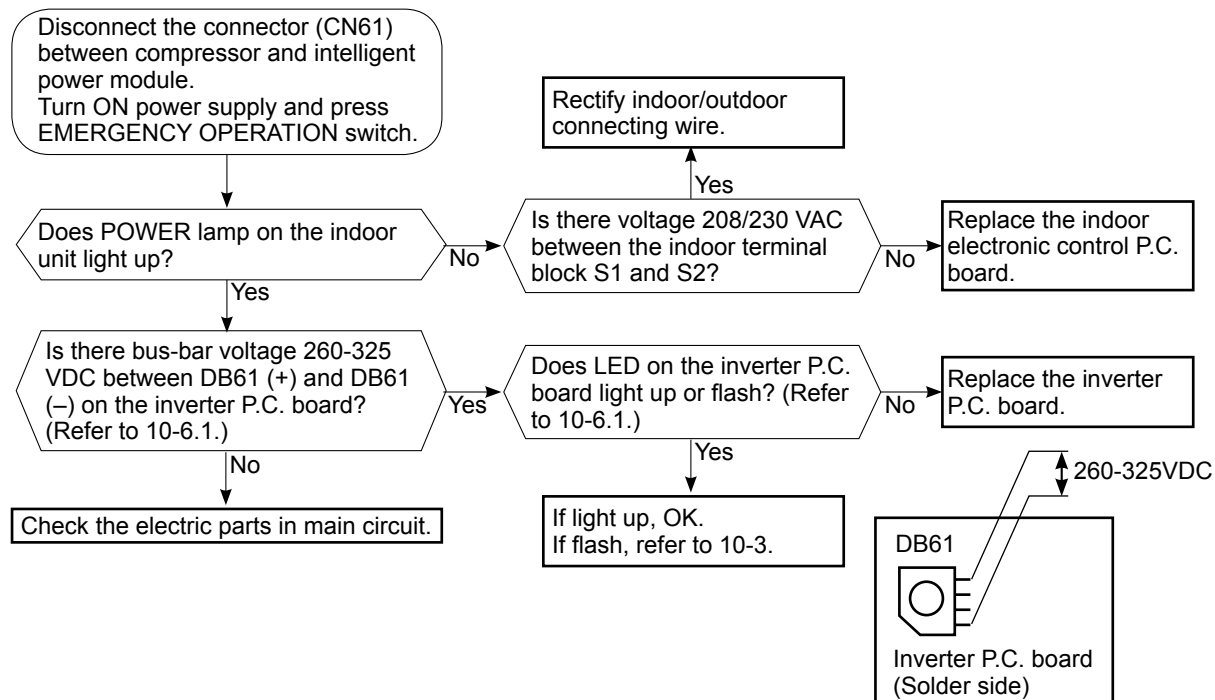


MUZ-FE18NA


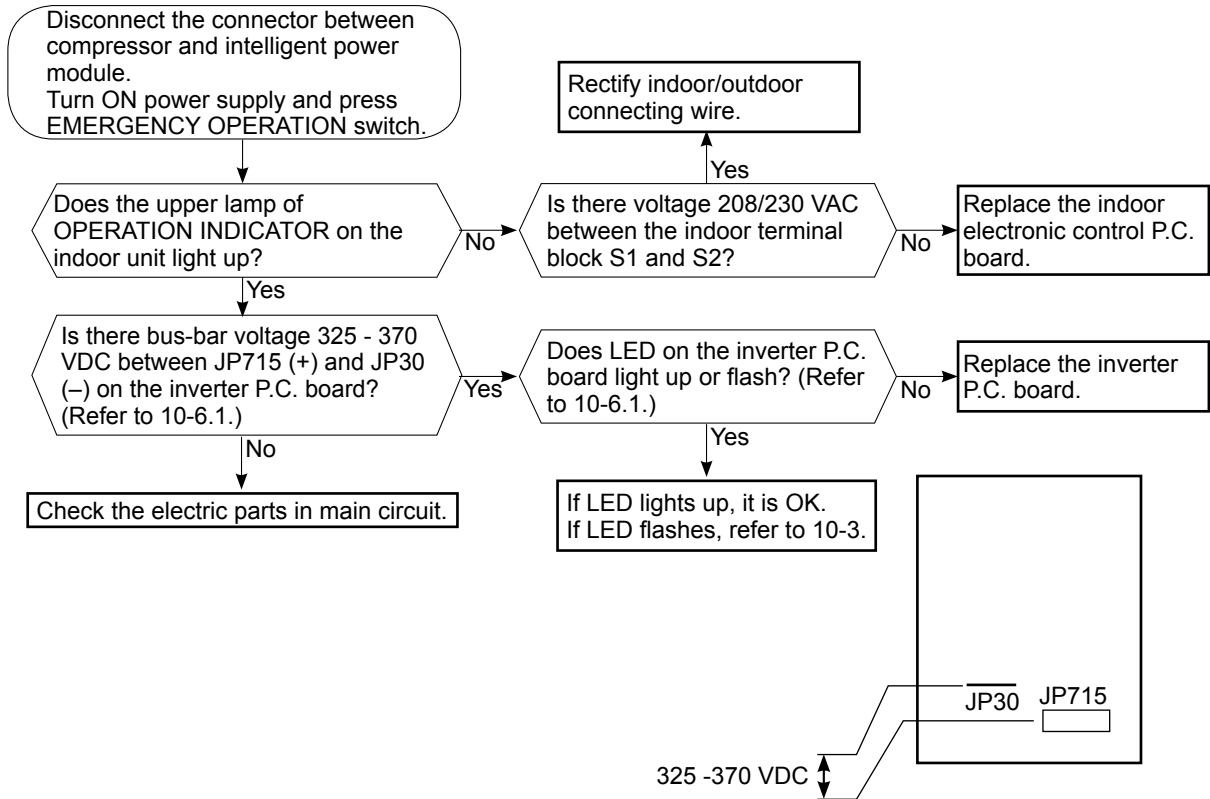


K Check of LEV (Expansion valve)


MSZ-FE09NA
MSZ-FE12NA

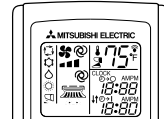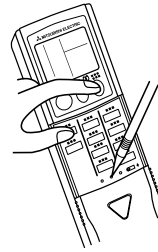

MSZ-FE18NA

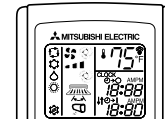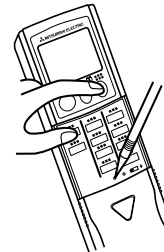


※1. Regardless of normal or abnormal condition, a short beep is emitted once the signal is received.

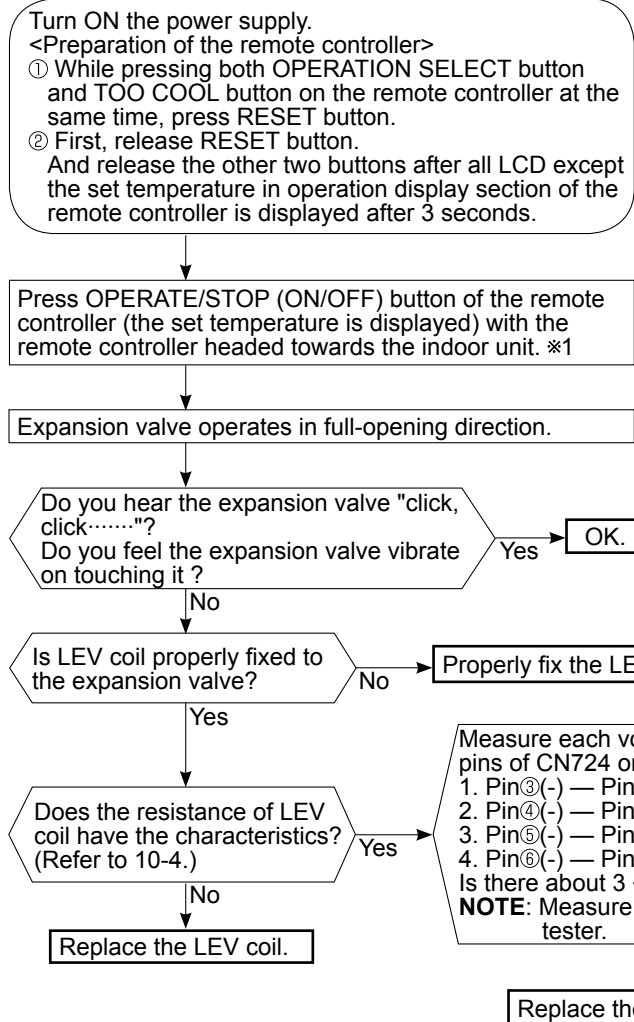



NOTE: After check of LEV, do the undermentioned operations.

1. Turn OFF the power supply and turn ON it again.
2. Press RESET button on the remote controller.


L Check of inverter P.C. board

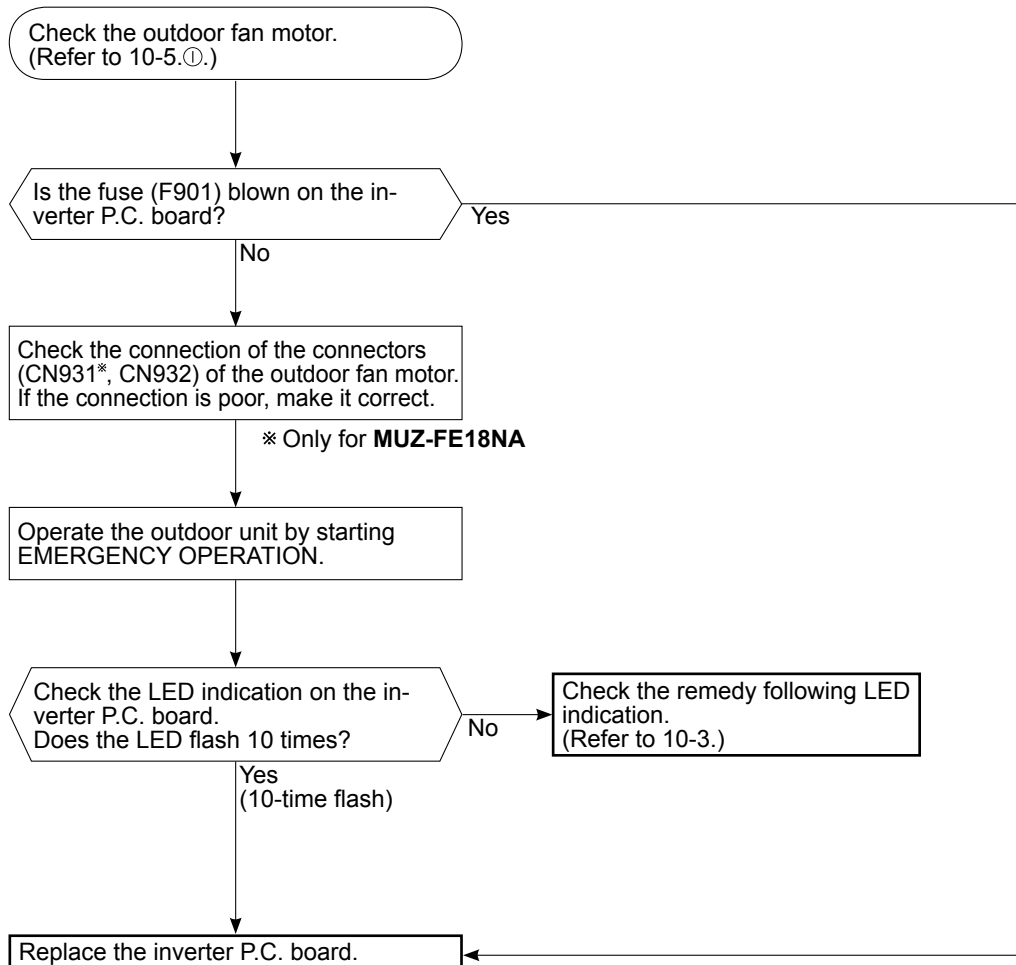

M How to check miswiring and serial signal error

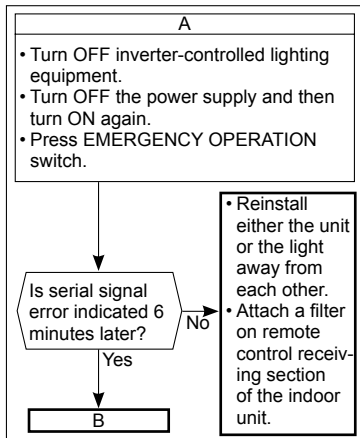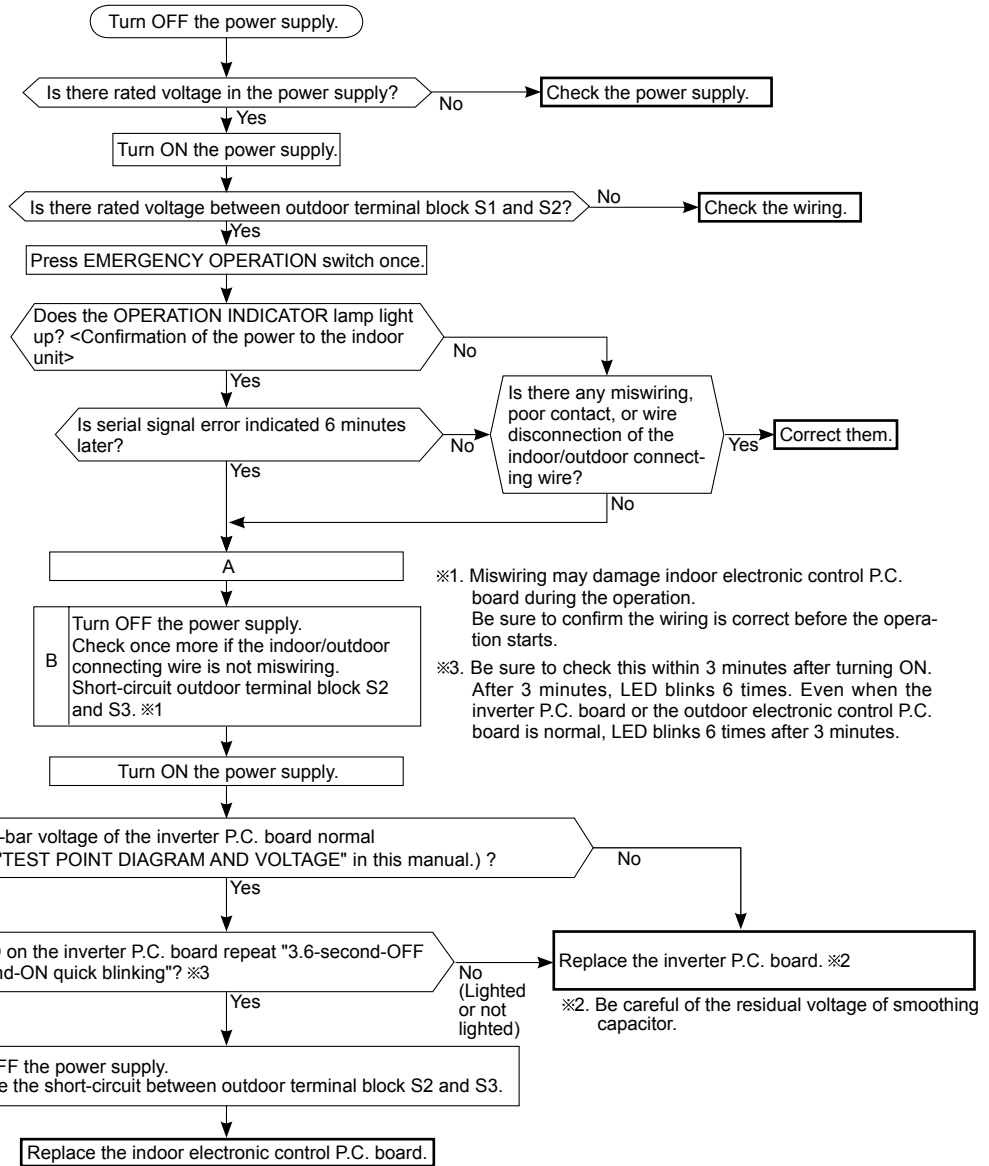

N Electromagnetic noise enters into TV sets or radios

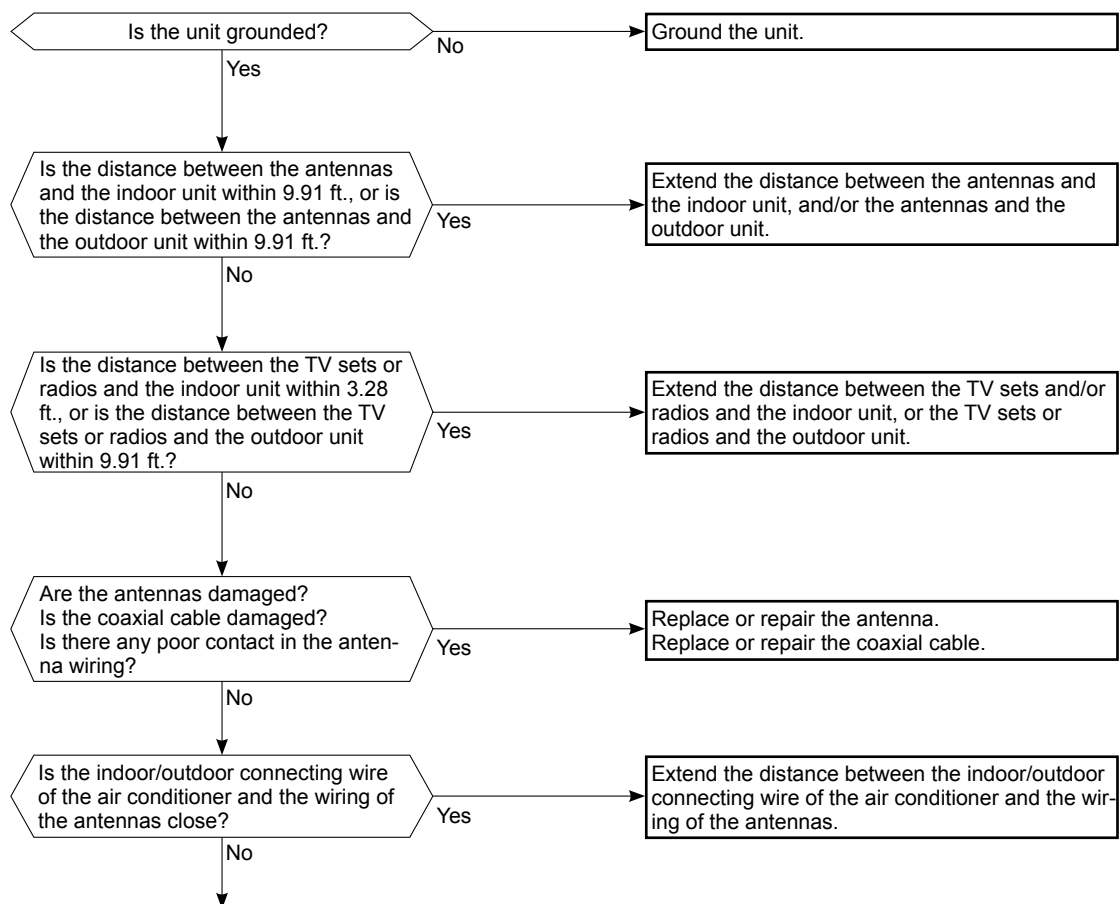


Even if all of the above conditions are fulfilled, the electromagnetic noise may enter, depending on the electric field strength or the installation condition (combination of specific conditions such as antennas or wiring). Check the followings before asking for service.

1. Devices affected by the electromagnetic noise
TV sets, radios (FM/AM broadcast, shortwave)
2. Channel, frequency, broadcast station affected by the electromagnetic noise
3. Channel, frequency, broadcast station unaffected by the electromagnetic noise
4. Layout of:
indoor/outdoor unit of the air conditioner, indoor/outdoor wiring, grounding wire, antennas, wiring from antennas, receiver
5. Electric field intensity of the broadcast station affected by the electromagnetic noise
6. Presence or absence of amplifier such as booster
7. Operation condition of air conditioner when the electromagnetic noise enters in
 - 1) Turn OFF the power supply once, and then turn ON the power supply. In this situation, check for the electromagnetic noise.
 - 2) Within 3 minutes after turning ON the power supply, press OPERATE/STOP (ON/OFF) button on the remote controller for power ON, and check for the electromagnetic noise.
 - 3) After a short time (3 minutes later after turning ON), the outdoor unit starts running. During operation, check for the electromagnetic noise.
 - 4) Press OPERATE/STOP (ON/OFF) button on the remote controller for power OFF, when the outdoor unit stops but the indoor/outdoor communication still runs on. In this situation, check for the electromagnetic noise.




10-6. TEST POINT DIAGRAM AND VOLTAGE

1. Inverter P.C. board

MUZ-FE09NA MUZ-FE12NA

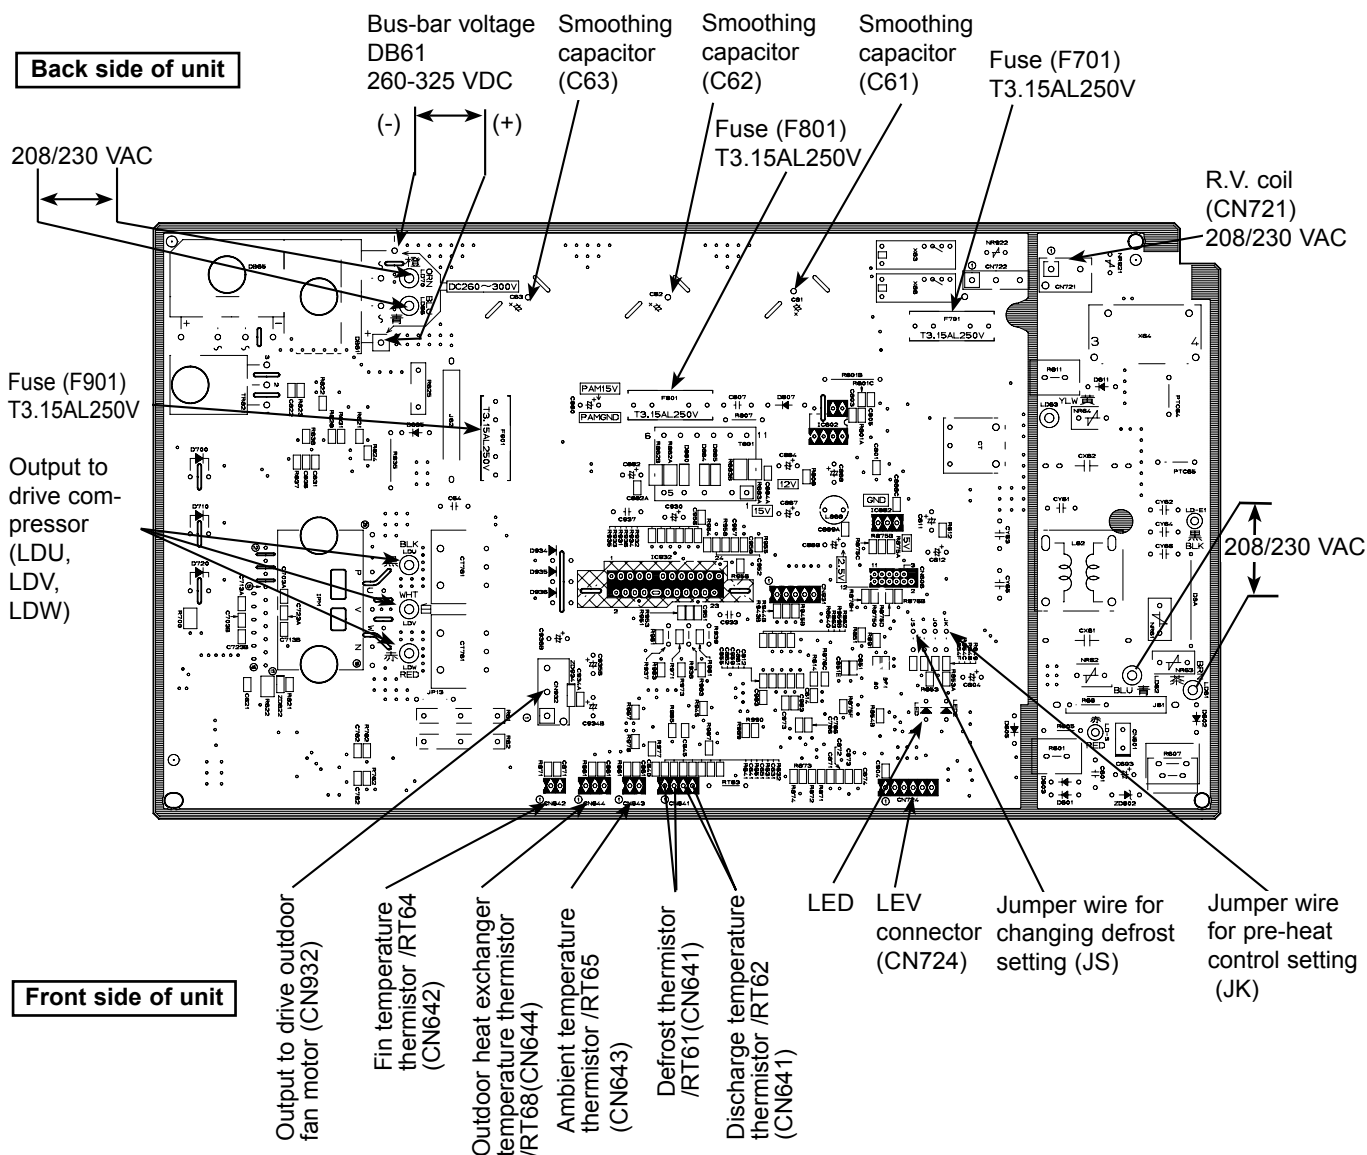

Defrost thermistor (RT61)
Ambient temperature thermistor (RT65)
Outdoor heat exchanger temperature thermistor (RT68)

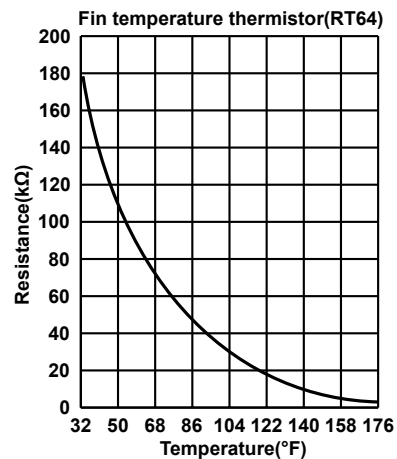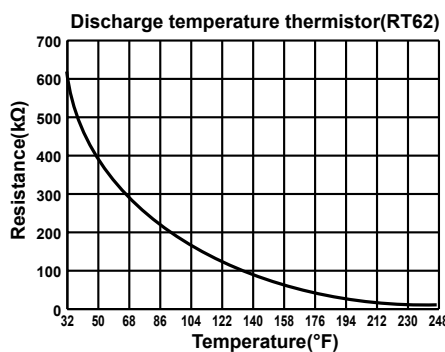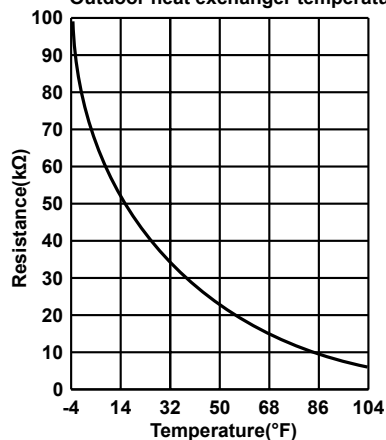

MUZ-FE18NA

Fuse (F62)
T2.0AL250V

Fuse (F601)
T3.15AL250V

R.V. coil (CN602)
208/230 VAC

Jumper wire for
changing defrost
setting (JS)

Jumper wire for
pre-heat control
setting (JK)

Signal of out-
door fan motor
(CN931)

Defrost thermistor
/RT61 (CN671)

Discharge temperature
thermistor/RT62
(CN671)

Outdoor heat exchanger
temperature thermistor
/RT68 (CN671)

Ambient temperature
thermistor/RT65
(CN672)

Fin temperature
thermistor/RT64
(CN673)


LED

Output to
drive outdoor
fan motor
(CN932)

Fuse (F901)
T3.15AL250V

Fuse (F880)
T3.15AL250V

LEV connector (CN724)



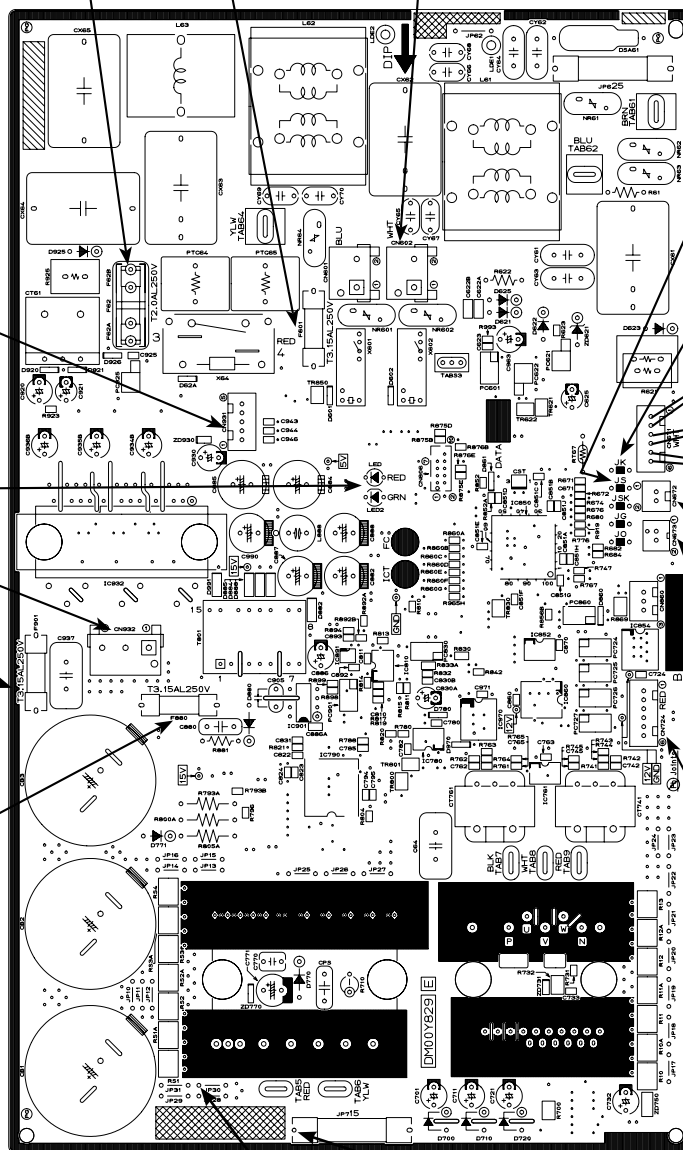


JP715 (+)

Bus-bar voltage
325 - 370 VDC

JP30 (-)


Defrost thermistor(RT61)
Ambient temperature thermistor(RT65)
Outdoor heat exchanger temperature thermistor(RT68)

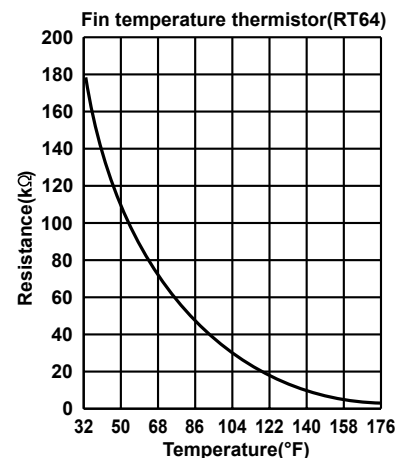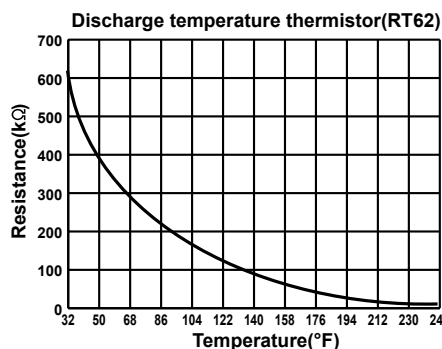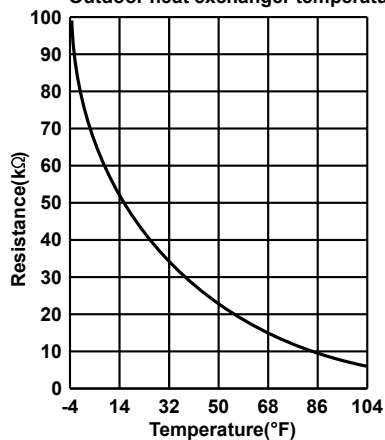


<"Terminal with locking mechanism" Detaching points>

The terminal which has the locking mechanism can be detached as shown below.
There are two types (refer to (1) and (2)) of the terminal with locking mechanism.
The terminal without locking mechanism can be detached by pulling it out.
Check the shape of the terminal before detaching.

(1) Slide the sleeve and check if there is a locking lever or not.

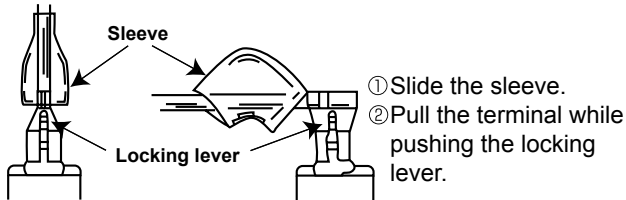

(2) The terminal with this connector has the locking mechanism.

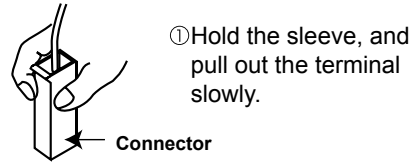

11-1. MUZ-FE09NA MUZ-FE12NA


NOTE: Turn OFF power supply before disassembling.

OPERATING PROCEDURE

1. Removing the cabinet


- (1) Remove the screw fixing the service panel. (Photo 1)
- (2) Pull down the service panel and remove it. (Photo 1)
- (3) Remove the screws fixing the conduit cover. (Photo 2)
- (4) Remove the conduit cover. (Photo 2)
- (5) Disconnect the power supply wire and indoor/outdoor connecting wire.
- (6) Remove the screws fixing the top panel. (Photo 1)
- (7) Remove the top panel. (Photo 1)
- (8) Remove the screws fixing the cabinet.
- (9) Remove the cabinet.
- (10) Remove the screws fixing the back panel.
- (11) Remove the back panel.




Photo 2

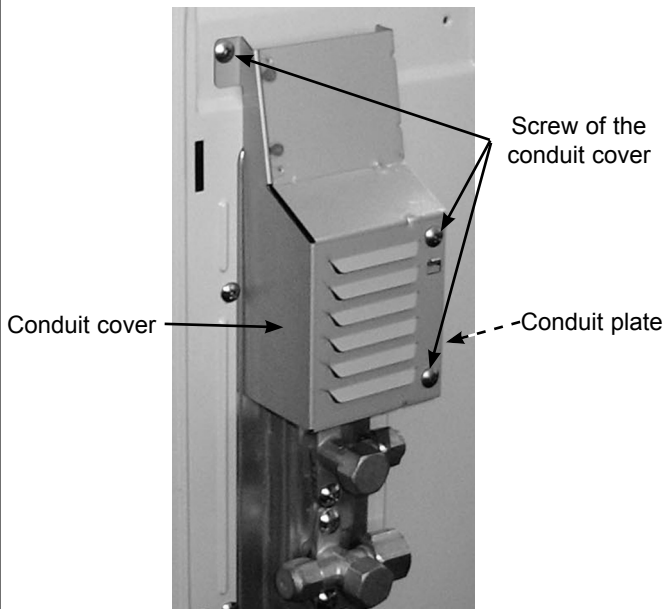

PHOTOS

Photo 1

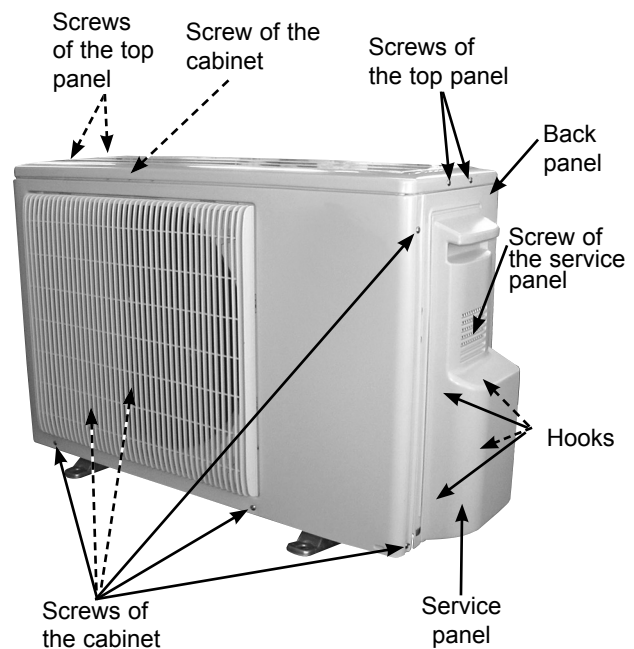
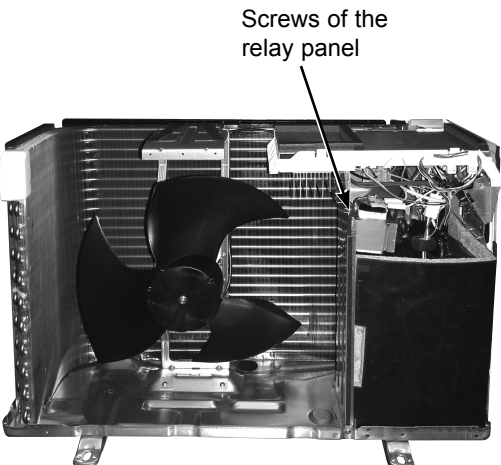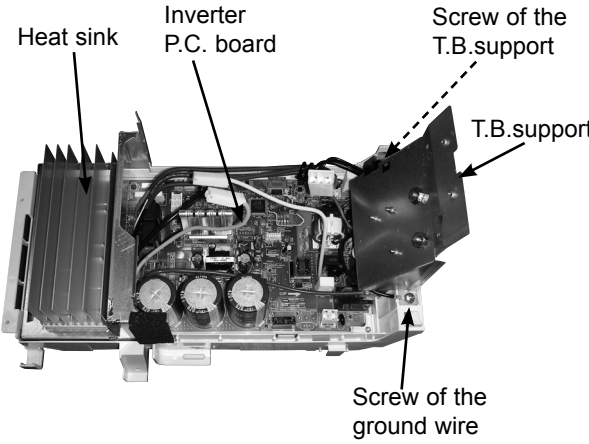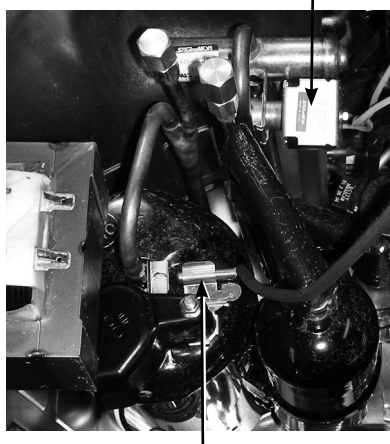
| OPERATING PROCEDURE | PHOTOS |
|---|--|
| <p>2. Removing the inverter assembly, inverter P.C. board</p> <p>(1) Remove the cabinet and panels. (Refer to 1.)</p> <p>(2) Disconnect the lead wire to the reactor and the following connectors:</p> <p><Inverter P.C. board></p> <p>CN721 (R.V.coil)</p> <p>CN932 (Fan motor)</p> <p>CN641 (Defrost thermistor and discharge temperature thermistor)</p> <p>CN643 (Ambient temperature thermistor)</p> <p>CN644 (Outdoor heat exchanger temperature thermistor)</p> <p>CN724 (LEV)</p> <p>(3) Remove the compressor connector (CN61).</p> <p>(4) Remove the screws fixing the relay panel. (Photo 3)</p> <p>(5) Remove the inverter assembly. (Photo 4)</p> <p>(6) Remove the screw of the ground wire and screw of the T.B.support. (Photo 4)</p> <p>(7) Remove the inverter P.C. board from the inverter assembly.</p> | <p>Photo 3</p>  <p>Screws of the relay panel</p> |
| <p>3. Removing R.V. coil</p> <p>(1) Remove the cabinet and panels. (Refer to 1.)</p> <p>(2) Remove the R.V. coil. (Photo 5)</p> | <p>Photo 4 (Inverter assembly)</p>  <p>Heat sink</p> <p>Inverter P.C. board</p> <p>Screw of the T.B.support</p> <p>T.B.support</p> <p>Screw of the ground wire</p> |
| <p>4. Removing the discharge temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor and ambient temperature thermistor.</p> <p>(1) Remove the cabinet and panels. (Refer to 1.)</p> <p>(2) Disconnect the lead wire to the reactor and the following connectors:</p> <p><Inverter P.C. board></p> <p>CN721 (R.V.coil)</p> <p>CN932 (Fan motor)</p> <p>CN641 (Defrost thermistor and discharge temperature thermistor)</p> <p>CN643 (Ambient temperature thermistor)</p> <p>CN644 (Outdoor heat exchanger temperature thermistor)</p> <p>(3) Pull out the discharge temperature thermistor from its holder. (Photo 5)</p> <p>(4) Pull out the defrost thermistor from its holder. (Photo 6)</p> <p>(5) Pull out the outdoor heat exchanger temperature thermistor from its holder. (Photo 6)</p> <p>(6) Pull out the ambient temperature thermistor from its holder.</p> | <p>Photo 5</p>  <p>R.V. coil</p> <p>Discharge temperature thermistor</p> |

OPERATING PROCEDURE


5. Removing outdoor fan motor

- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Disconnect the connectors for outdoor fan motor.
- (3) Remove the propeller nut. (Photo 7)
- (4) Remove the propeller. (Photo 7)
- (5) Remove the screws fixing the fan motor. (Photo 7)
- (6) Remove the fan motor.

6. Removing the compressor and 4-way valve

- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Remove the inverter assembly. (Refer to 2.)
- (3) Recover gas from the refrigerant circuit.
NOTE: Recover gas from the pipes until the pressure gauge shows 0 PSIG.
- (4) Detach the brazed part of the suction and the discharge pipes connected with compressor.
- (5) Remove the nuts of compressor legs.
- (6) Remove the compressor.
- (7) Detach the brazed part of pipes connected with 4-way valve. (Photo 8)

Photo 8

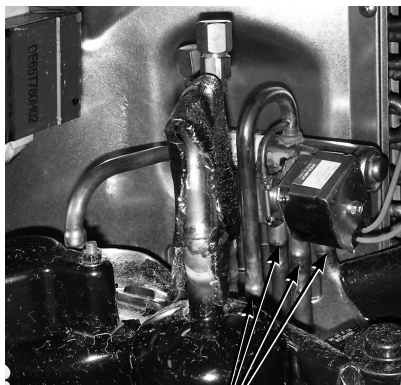

Brazed parts of 4-way valve

PHOTOS

Photo 6


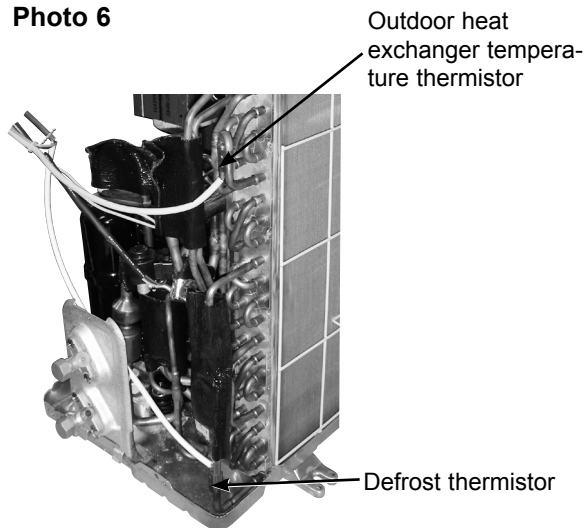


Photo 7

Screws of the outdoor fan motor



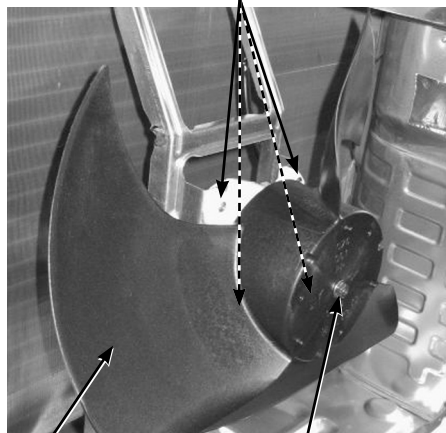


Propeller

Propeller nut

11-2. MUZ-FE18NA

NOTE: Turn OFF power supply before disassembling.
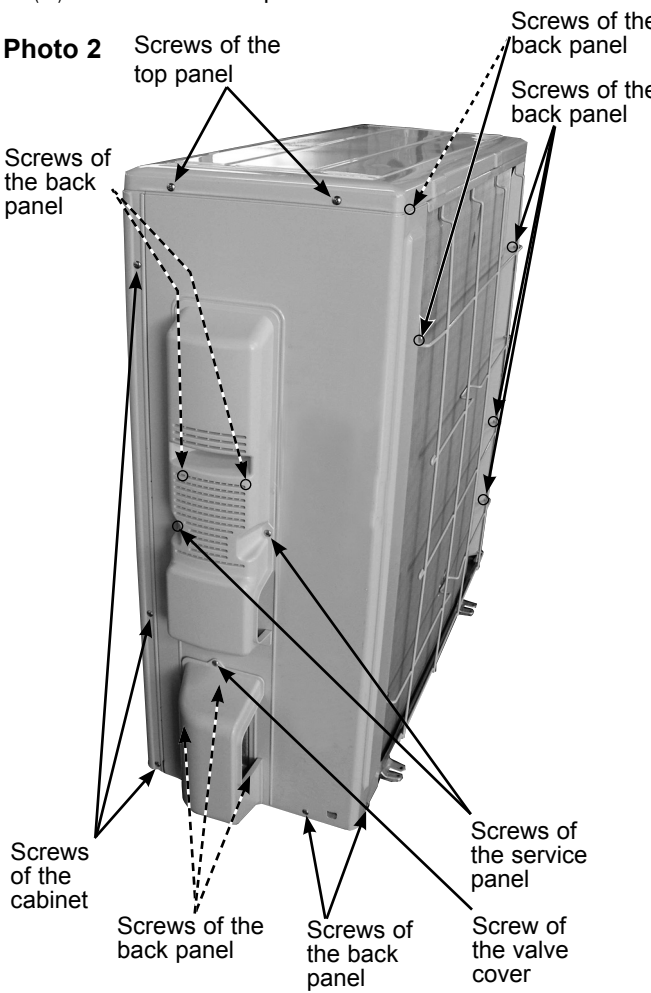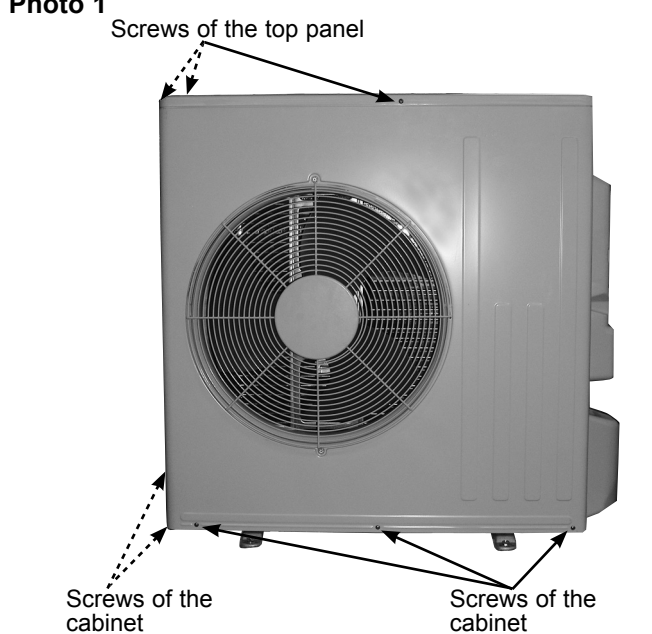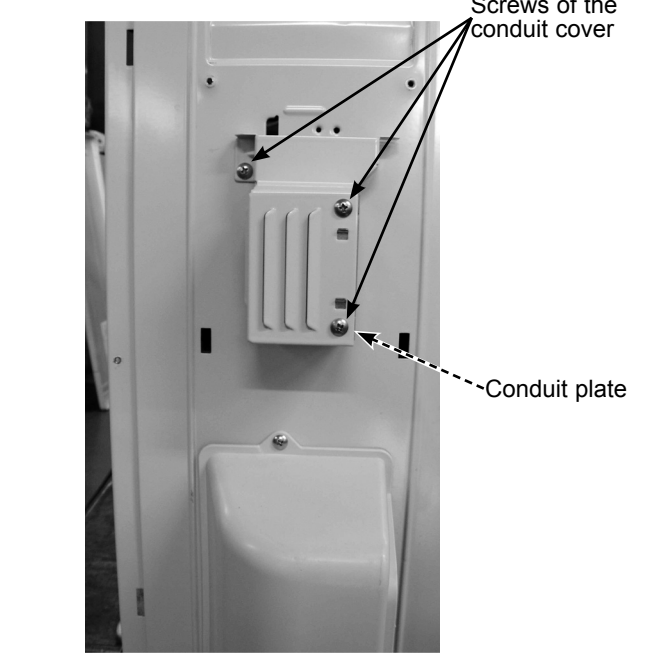
| OPERATING PROCEDURE | PHOTOS |
|---|---|
| <p>1. Removing the cabinet</p> <ol style="list-style-type: none"> (1) Remove the screws of the service panel. (2) Remove the screws of the top panel. (3) Remove the screw of the valve cover. (4) Remove the service panel. (5) Remove the screws fixing the conduit cover. (Photo 3) (6) Remove the conduit cover. (Photo 3) (7) Remove the top panel. (8) Remove the valve cover. (9) Disconnect the power supply and indoor/outdoor connecting wire. (10) Remove the screws of the cabinet. (11) Remove the cabinet. (12) Remove the screws of the back panel. (13) Remove the back panel. <p>Photo 2</p>  <p>Screws of the top panel</p> <p>Screws of the back panel</p> <p>Screws of the cabinet</p> <p>Screws of the service panel</p> <p>Screw of the valve cover</p> <p>Screws of the back panel</p> <p>Screws of the back panel</p> <p>Screws of the cabinet</p> | <p>Photo 1</p>  <p>Screws of the top panel</p> <p>Screws of the cabinet</p> <p>Screws of the cabinet</p> <p>Photo 3</p>  <p>Screws of the conduit cover</p> <p>Conduit plate</p> |

OPERATING PROCEDURE

2. Removing the inverter assembly, inverter P.C. board

- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Disconnect the lead wire to the reactor and the following connectors:
 <Inverter P.C. board>
 CN602 (R.V. coil)
 CN931, CN932 (Fan motor)
 CN671 (Defrost thermistor, discharge temperature thermistor and outdoor heat exchanger temperature thermistor)
 CN672 (Ambient temperature thermistor)
 CN724 (LEV)
- (3) Remove the compressor connector.
- (4) Remove the screws fixing the relay panel.
- (5) Remove the relay panel.
- (6) Remove the earth wires and the lead wires of the inverter P.C. board.
- (7) Remove the screw of the PB support.
- (8) Remove the inverter P.C. board from the relay panel.

3. Removing R.V. coil

- (1) Remove the cabinet and panels. (Refer to 1.)
- (2) Disconnect the following connector:
 <Inverter P.C. board>
 CN602 (R.V. coil)
- (3) Remove the R.V. coil.

PHOTOS

Photo 4





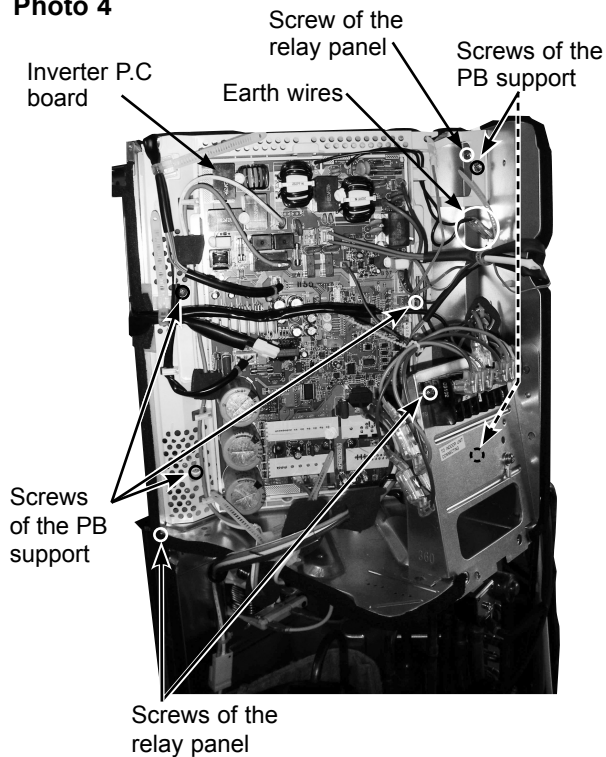


Photo 5

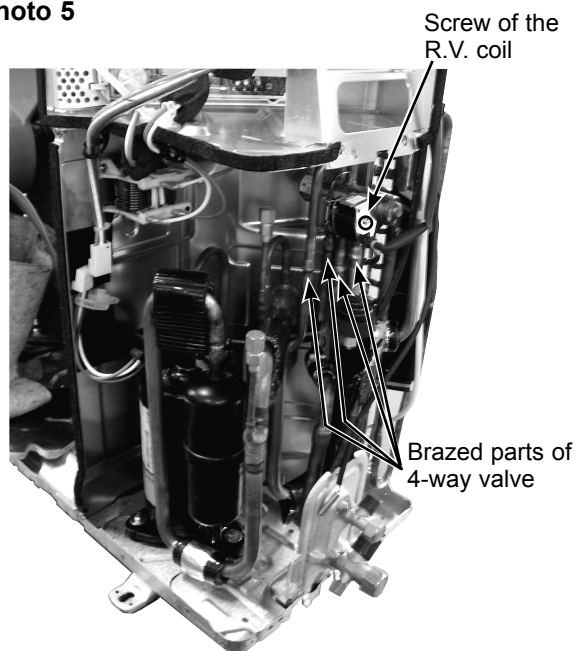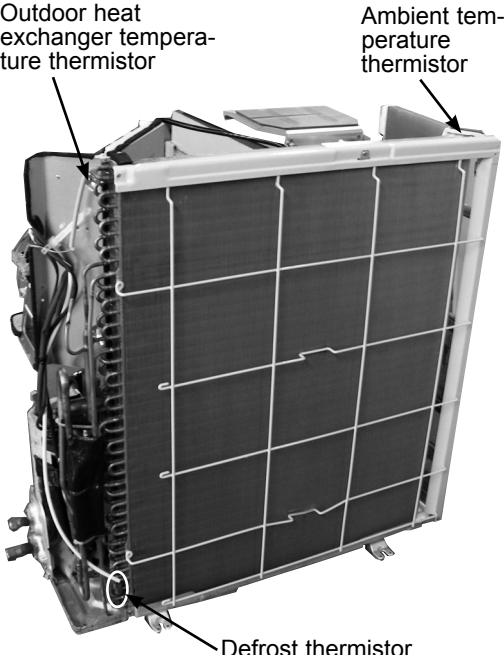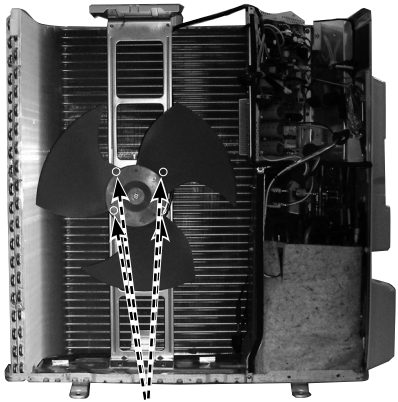

| OPERATING PROCEDURE | PHOTOS |
|--|--|
| <p>4. Removing the discharge temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor and ambient temperature thermistor</p> <ol style="list-style-type: none"> (1) Remove the cabinet and panels. (Refer to 1.) (2) Disconnect the lead wire to the reactor and the following connectors: <Inverter P.C. board> CN671 (Defrost thermistor, discharge temperature thermistor and outdoor heat exchanger temperature thermistor) CN672 (Ambient temperature thermistor) (3) Pull out the discharge temperature thermistor from its holder. (Photo 8) (4) Pull out the defrost thermistor from its holder. (5) Pull out the outdoor heat exchanger temperature thermistor from its holder. (6) Pull out the ambient temperature thermistor from its holder. | <p>Photo 6</p>  <p>Outdoor heat exchanger temperature thermistor</p> <p>Ambient temperature thermistor</p> <p>Defrost thermistor</p> |
| <p>5. Removing outdoor fan motor</p> <ol style="list-style-type: none"> (1) Remove the top panel, cabinet and service panel. (Refer to 1.) (2) Disconnect the following connectors: <Inverter P.C. board> CN931 and CN932 (Fan motor) (3) Remove the propeller. (4) Remove the screws fixing the fan motor. (5) Remove the fan motor. | <p>Photo 7</p>  <p>Screws of the outdoor fan motor</p> |
| <p>6. Removing the compressor and 4-way valve</p> <ol style="list-style-type: none"> (1) Remove the top panel, cabinet and service panel. (Refer to 1.) (2) Remove the back panel. (Refer to 1.) (3) Remove the inverter assembly. (Refer to 2.) (4) Recover gas from the refrigerant circuit. <p>NOTE: Recover gas from the pipes until the pressure gauge shows 0 kg/cm² (0 MPa).</p> <ol style="list-style-type: none"> (5) Detach the brazed part of the suction and the discharge pipes connected with compressor. (6) Remove the compressor nuts. (7) Remove the compressor. (8) Detach the brazed parts of 4-way valve and pipes. (Photo 5) | <p>Photo 8</p>  <p>Brazed part of the discharge pipe</p> <p>Discharge temperature thermistor</p> <p>Brazed part of the suction pipe</p> |

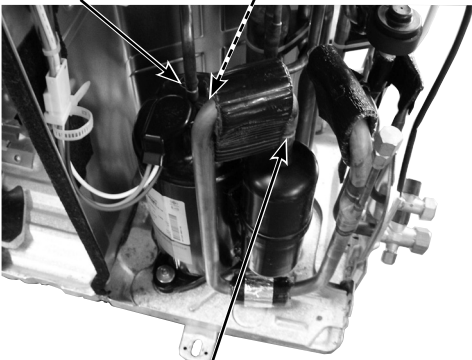

© Copyright 2009 MITSUBISHI ELECTRIC CO.,LTD
Distributed in Sep. 2010. No. OBH543 REVISED EDITION-A 5
Distributed in Jul. 2009. No. OBH543 5
Made in Japan

New publication, effective Sep. 2010
Specifications subject to change without notice.